



Thanks for your interest
See more at www.ngi-global.com

All NGI hygienic components are
design and patent protected



Seismic levelling feet

NGI A/S
Virkelyst 5
DK-9400 Nørresundby
T: +45 98 17 45 00
E: ngi@ngi-global.com

NGI Italy
Via Guglielmo Jervis 4
IT-10015 IVREA TO
T: +39 077 568 7010
E: ngi@ngi-global.com

NGI Inc. USA
805 Satellite Blvd
Suwanee, GA 30024, USA
T: +1 (646) 201 9410
E: sales@ngi-global.com


NGI GmbH (drum motors only)
Ottostraße 15b
DE-41836 Hückelhoven-Baal
T: +49 (0) 2433 96 422 90
E: drivetech@ngi-global.com

ngi-global.com



The only seismic levelling feet in the world designed and calculated according to the international new zealand seismic standard

The NGI seismic foot is capable of withstanding earthquakes due to its ability to withstand combinations of vertical and horizontal loads

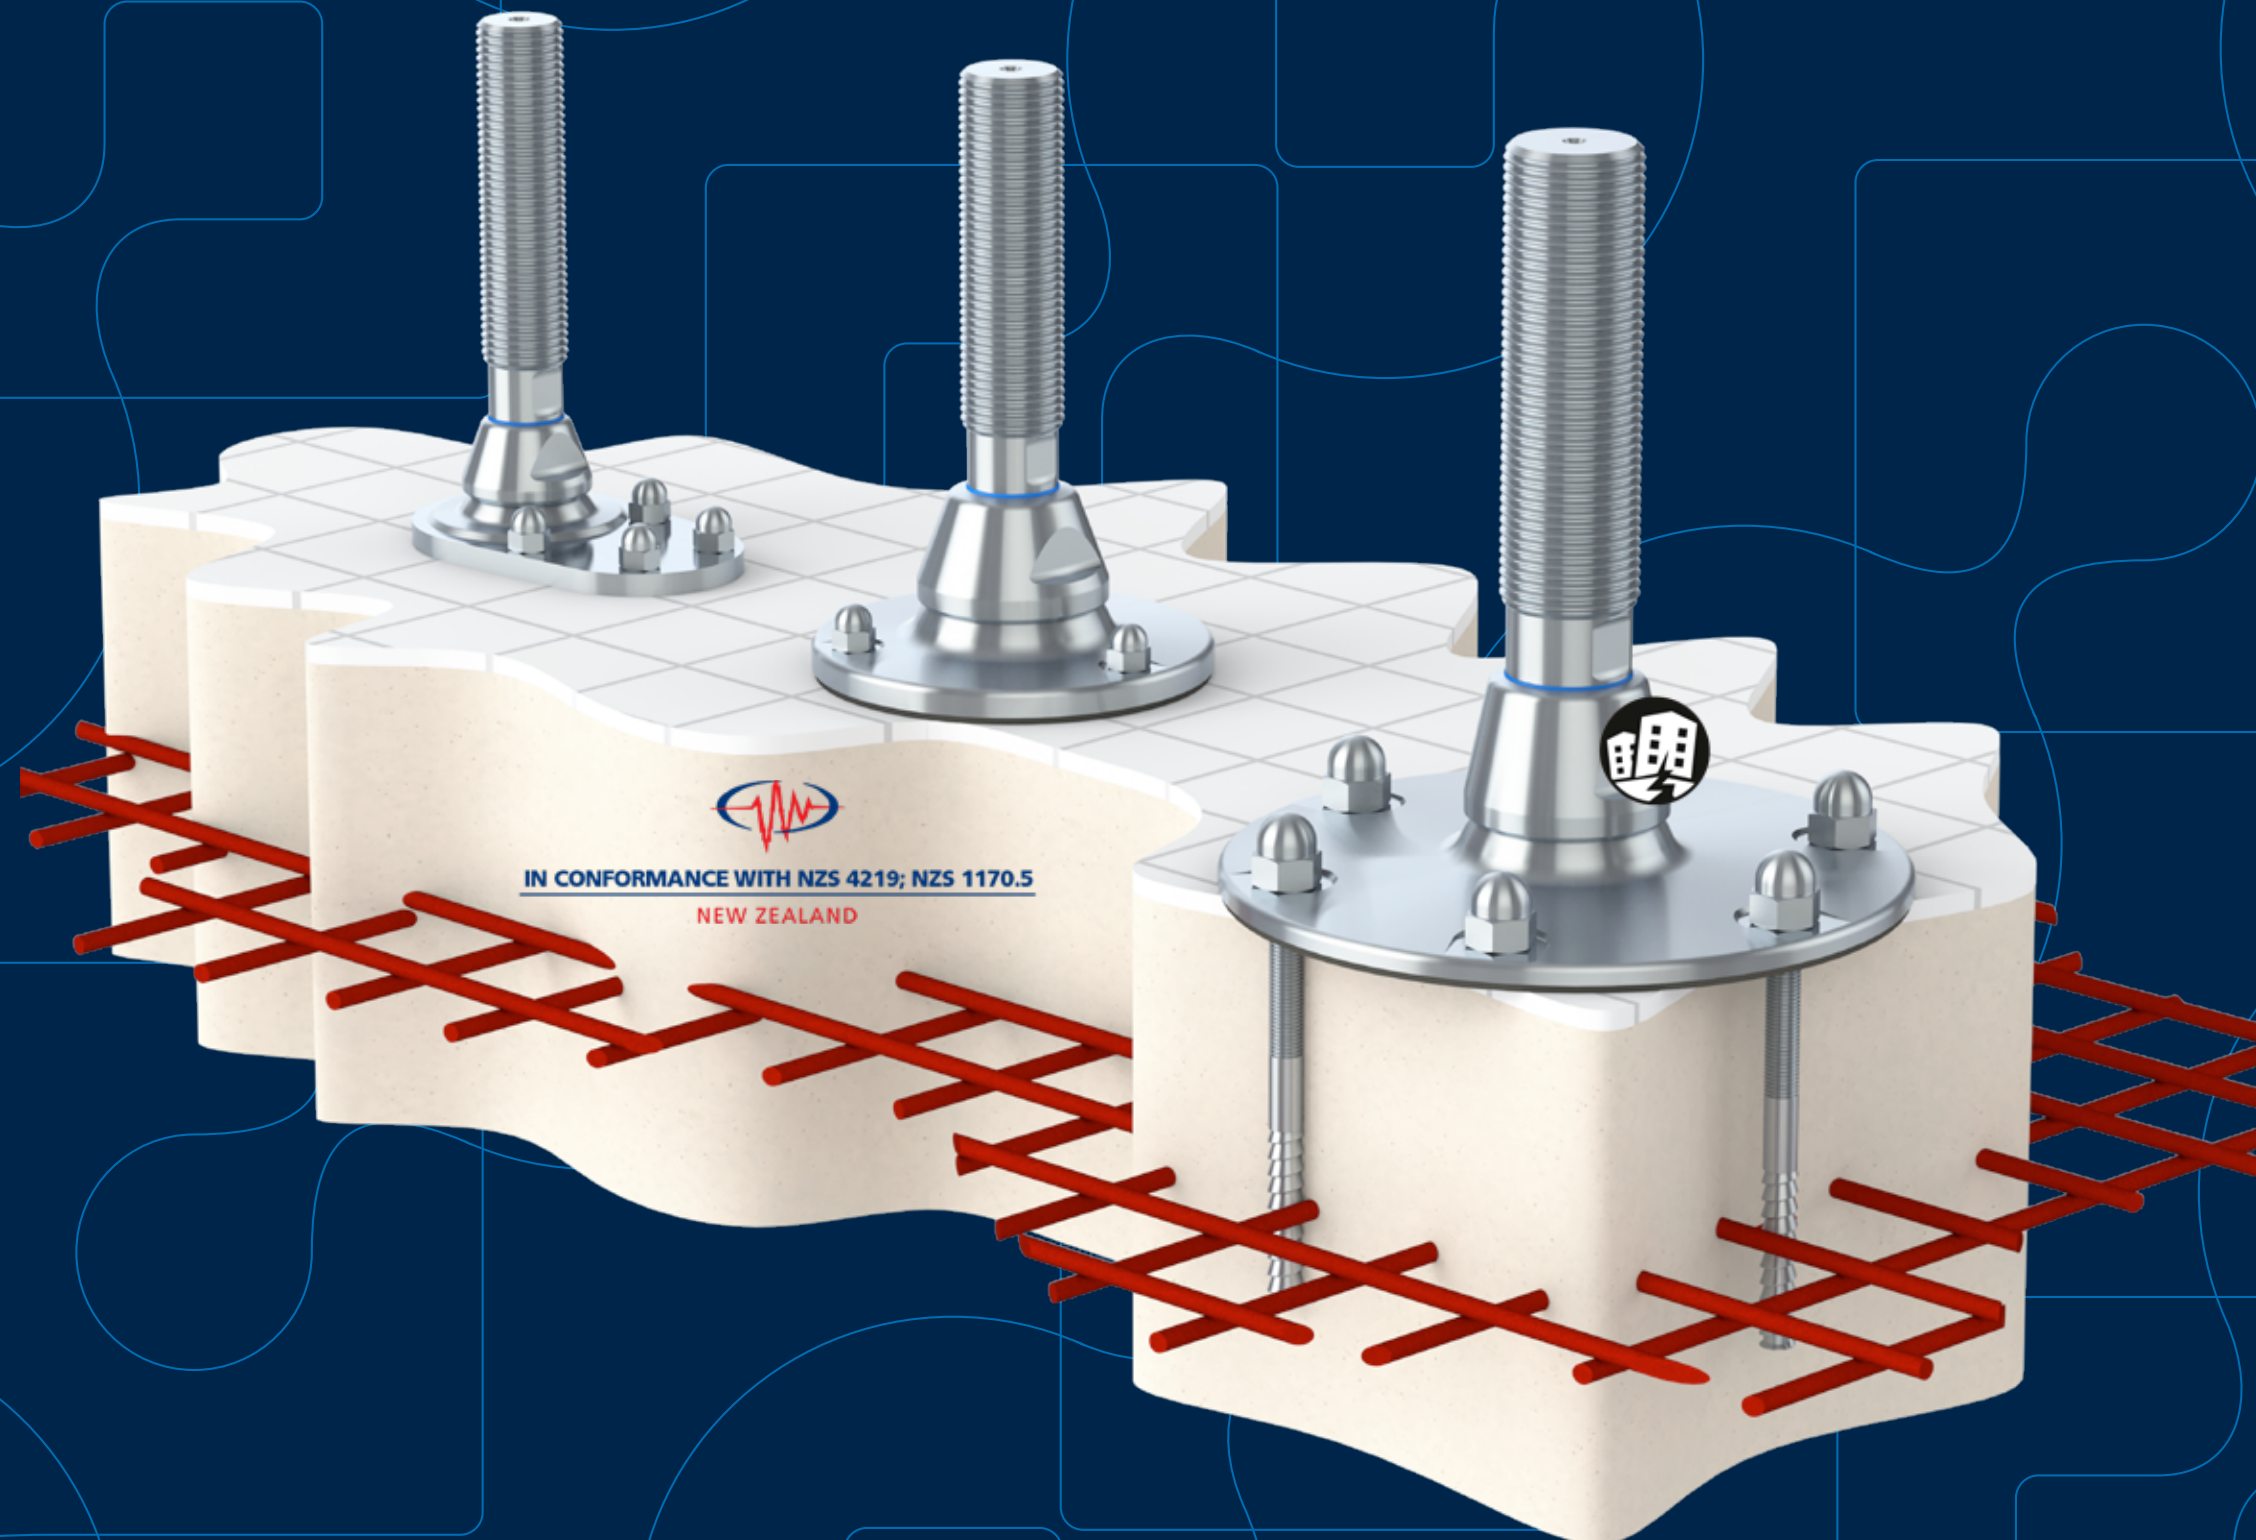

Seismic Levelling feet



Reliable seismic security





We provide the optimal
solution for your application

The only hygienic seismic levelling feet in the world designed and calculated according to the international New Zealand seismic standard.

Self-draining surfaces, sealed movable parts and no exposed thread secures absolute minimum cleaning and maximum product safety.

The design and patent protected seismic levelling foot is the optimal choice for machinery, equipment, tanks and vessels located in areas subject to earthquakes and also has to comply with the strictest hygienic requirements.

Our seismic levelling foot is capable of withstanding earthquakes due to its' ability to withstand combinations of vertical and horizontal loads. Additionally, the certified hygienic type is designed in accordance with the 3-A and EHEDG hygienic standards and certified in accordance with USDA hygienic standard.

-  Enhanced food safety
-  A complete hygienic design minimizing risks of cross-contamination
-  Plug&Play installation
-  Minimize water usage and use of cleaning detergents



IN CONFORMANCE WITH NZS 4219; NZS 1170.5
NEW ZEALAND



Go to ngi-global.com/products/levelling-feet/seismic-levelling-feet/
to read more and see our product range.

Seismic Levelling feet

Our seismic levelling foot has been developed and tested using the Finite Element Method (FEA) and is compliant with the governmental regulations of California and New Zealand - (NZS 4219:2009).

Our seismic foot is capable of withstanding earthquakes due to its ability to withstand combinations of vertical and horizontal loads. The NGI seismic product configurator combines earthquake risk data in the geographic area with data about your specific equipment. The result of this detailed analysis will help you select the optimal solution in terms of safety and minimizing the risk of damage to your machinery and equipment caused by earthquakes.



Product Group Features

- Simple and fast installation with height-adjustable compact design
- Movable set-up - no concrete molding required
- Total seismic stability through bolted fastening and patented locking mechanism
- Verified through Finite Element Analysis (FEA) and calculated according to New Zealand seismic standard (NZS 4219)
- Seismic anchors chosen and approved by our experienced partner Hilti
- Optional certified hygienic nuts from NGI
- Stainless steel AISI 304/A2, 1.4301. Optional AISI 316/A4, 1.4401



IN CONFORMANCE WITH NZS 4219; NZS 1170.5
NEW ZEALAND



XHJSE (S)

Special Features

- Height adjustment 155 mm - 285 mm
- Certified according to USDA hygienic standard
- Designed according to the 3-A and EHEDG hygienic standards
- Available in two standard lengths per diameter size
- Comes with a hygienic sleeve
- Circular arrangement of anchors for best seismic performance
- Spindle sizes M30, M36, M42, M48 & M56 mm

11



HXJE (L)

Special Features

- Spindle sizes M56, M64, M72, M80 & M90 mm
- Available in two standard lengths per diameter size
- Circular arrangement of anchors for best seismic performance
- Sealed to the floor by rubber sealing

17



XHJSE (L)

Special Features

- Height adjustment 221 mm - 355 mm
- Certified according to USDA hygienic standard
- Designed according to the 3-A and EHEDG hygienic standards
- Available in two standard lengths per diameter size
- Comes with a hygienic sleeve
- Circular arrangement of anchors for best seismic performance
- Spindle sizes M56, M64, M72, M80 & M90 mm

13



HXJCFE (S)

Special Features

- Spindle sizes M30, M36, M42, M48 & M56 mm
- Anchors decentered at one side of the spindle
- Available in two standard lengths per diameter size
- Not sealed to the floor

19



HXJE (S)

Special Features

- Spindle sizes M30, M36, M42, M48 & M56 mm
- Available in two standard lengths per diameter size
- Circular arrangement of anchors for best seismic performance
- Sealed to the floor by rubber sealing

15



HXJCFE (L)

Special Features

- Spindle sizes M56, M64, M80 & M90 mm
- Anchors decentered at one side of the spindle
- Available in two standard lengths per diameter size
- Not sealed to the floor

21

Accessories seismic Levelling feet

Installing seismic levelling feet requires several tools and accessories.

NGI has teamed up with HILTI, the specialist for seismic anchoring, to offer a complete seismic installation kit for your seismic project. NGI is able to deliver all necessary accessories which ensures a quick and easy installation of the seismic levelling feet. It is important to use seismic approved accessories when fastening seismic feet. If not correctly installed it will meet neither 3A, USDA or EHEDG hygienic demands nor the seismic load specifications.



CLEANING & MAINTENANCE

This cleaning and maintenance manual describes how to clean and maintain the levelling foot once installed.

23




ANCHORS

Special Features

- Stainless steel A4
- PROFIS software
- Base materials: concrete (cracked), concrete (uncracked), masonry (solid)

39

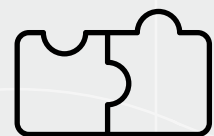

INSTALLATION MANUAL

This installation manual describes how to install the levelling foot onto the machine or equipment for which it is intended to support.

25



DOME HEADED NUTS & WASHERS

Special Features

- Stainless steel AISI 304/A2, 1.4301
- Standard dome-headed nuts (DIN 1587 A2)
- All dimensions available

41



HILTI TOOLS

Special Features

Hilti's seismic research includes detailed investigation of product performance under simulated seismic conditions and full-scale system testing.

37



NGI WRENCHES

Special Features

XHJSE machine feet need three different wrenches for installation. NGI wrenches are laser cut and designed to fit NGI machine feet.

43

Certified hygienic Seismic levelling feet - XHJSE (S)




-  Certified hygienic
-  Minimized cleaning time
-  Minimized water usage

The design and patent protected seismic XHJSE (S) levelling foot is the optimal choice for machinery, equipment, tanks and vessels located in areas subject to earthquakes and also has to comply with the strictest hygienic requirements.

- Total seismic stability and bolted fastening to concrete floors
- Movable set-up - no concrete moulding required
- Seismic anchors chosen and approved by our experienced partner Hilti
- Patented locking mechanism secures seismic stability
- Calculated according to international seismic standard NZS 4219
- Design verified through Finite element simulation
- Designed according to the 3-A and EHEDG hygienic standards
- Certified according to USDA hygienic standard
- Stainless steel AISI 304/A2, 1.4301. Optional AISI 316/A4, 1.4401

Available upon request:


- Official USDA hygienic certificate
- Datasheet calculations
- Installation instructions
- Cleaning & maintenance instructions

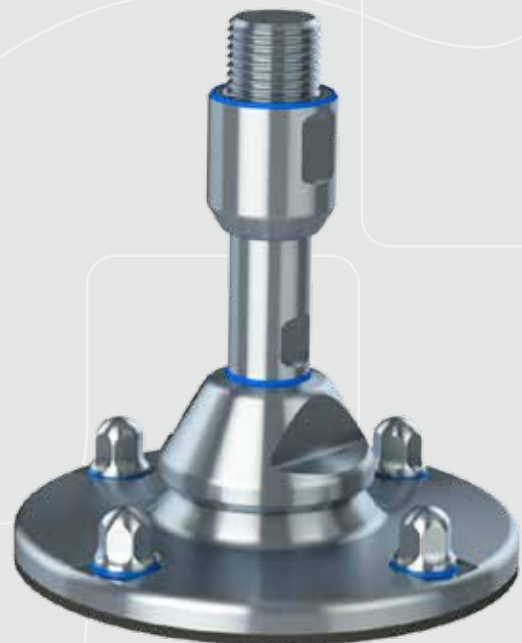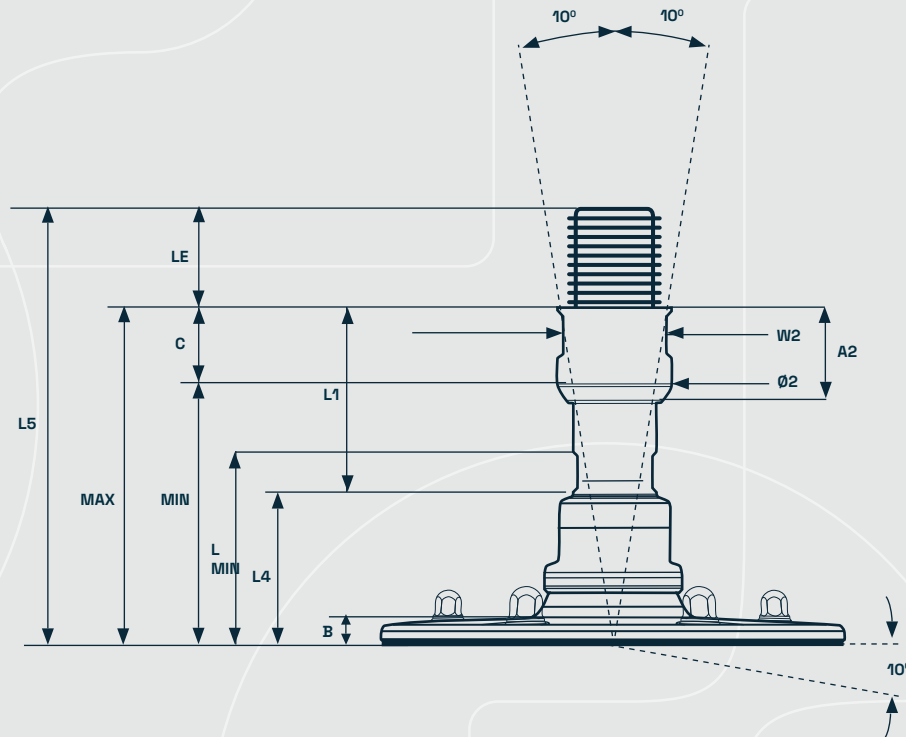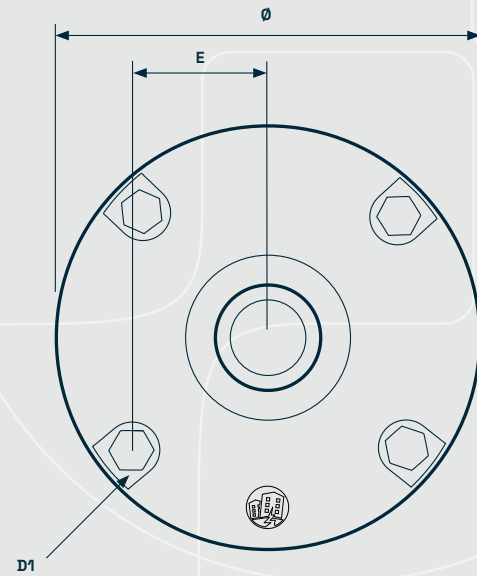

Certified hygienic Seismic levelling feet - XHJSE (S)



FOOT PLATE

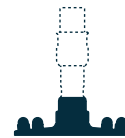

SPINDLE



SLEEVE



PRODUCT CODE	FOOT - SPINDLE - SLEEVE
EXAMPLE	XHJSE150(S)-XHJSE36150-RHOXS3655

TYPE	DIAMETER Ø [mm]	HEIGHT B [mm]	HOLES [PCS]	BOLT TYPE [SIZE]	POSITION E [mm]	NOM PULL TENSION [N]	ITEM CODE
150	149	19	3	M10x160	60	28000	XHJSE150(S)
200	199	16,5	4	M12x155	80	38000	XHJSE200(S)
250	249	15	4	M16x205	101	61.000	XHJSE250(S)
300	299	12	6	M20x250	121	80000	XHJSE300(S)

THREAD	HEIGHT L1 [mm]	HEIGHT L4 [mm]	HEIGHT L5 [mm]	L MIN [mm]	NOM LOAD COMPRESSION [N]	MAX HORIZONTAL LOAD SHEAR [N]	ITEM CODE
M30	116	77	228	105	60.000	2.100	XHJSE(S)30150
M30	178	77	288	107	60.000	1.300	XHJSE(S)30210
M36	114	77	221	103	96.000	3.500	XHJSE(S)36150
M36	179	77	288	105	96.000	2.200	XHJSE(S)36210
M42	118	82	233	109	140.000	4.900	XHJSE(S)42150
M42	179	82	298	110	140.000	3.200	XHJSE(S)42210
M48	143	82	283	120	140.000	6.900	XHJSE(S)48200
M48	203	82	343	120	140.000	4.800	XHJSE(S)48260
M56	138	82	278	115	140.000	13.100	XHJSE(S)56200
M56	203	82	343	120	140.000	8.900	XHJSE(S)56260

THREAD	W2 [mm]	DIAMETER Ø2 [mm]	HEIGHT A2 [mm]	ADJUSTMENT C [mm]	LEVELLING MAX [mm]	LEVELLING MIN [mm]	ITEM CODE
M30	38	41,8	55	33	193	160	RHOXS3055
M30	38	41,8	85	63	255	192	RHOXS3085
M36	46	49,8	55	36	191	158	RHOXS3655
M36	46	49,8	85	66	256	190	RHOXS3685
M42	50	54,5	55	36	200	164	RHOXS4255
M42	50	54,5	85	66	261	195	RHOXS4285
M48	55	59,5	70	35	225	190	RHOXS4870
M48	55	59,5	100	65	285	220	RHOXS48100
M56	65	69,5	70	35	220	185	RHOXS5670
M56	65	69,5	100	65	285	220	RHOXS56100

Maximum nominal load
Tolerance of total height

= Depends on horizontal forces, request load diagram
= +/-1,5 mm

Certified hygienic Seismic levelling feet - XHJSE (L)



- Certified hygienic
- Minimized cleaning time
- Minimized water usage

The design and patent protected seismic XHJSE (L) levelling foot is the optimal choice for machinery, equipment, tanks and vessels located in areas subject to earthquakes and also has to comply with the strictest hygienic requirements.

- Total seismic stability and bolted fastening to concrete floors
- Movable set-up - no concrete moulding required
- Seismic anchors chosen and approved by our experienced partner Hilti
- Patented locking mechanism secures seismic stability
- Calculated according to international seismic standard NZS 4219
- Design verified through Finite element simulation
- Designed according to the 3-A and EHEDG hygienic standards
- Certified according to USDA hygienic standard
- Stainless steel AISI 304/A2, 1.4301. Optional AISI 316/A4, 1.4401

Available upon request:

- Official USDA hygienic certificate
- Datasheet calculations
- Installation instructions
- Cleaning & maintenance instructions

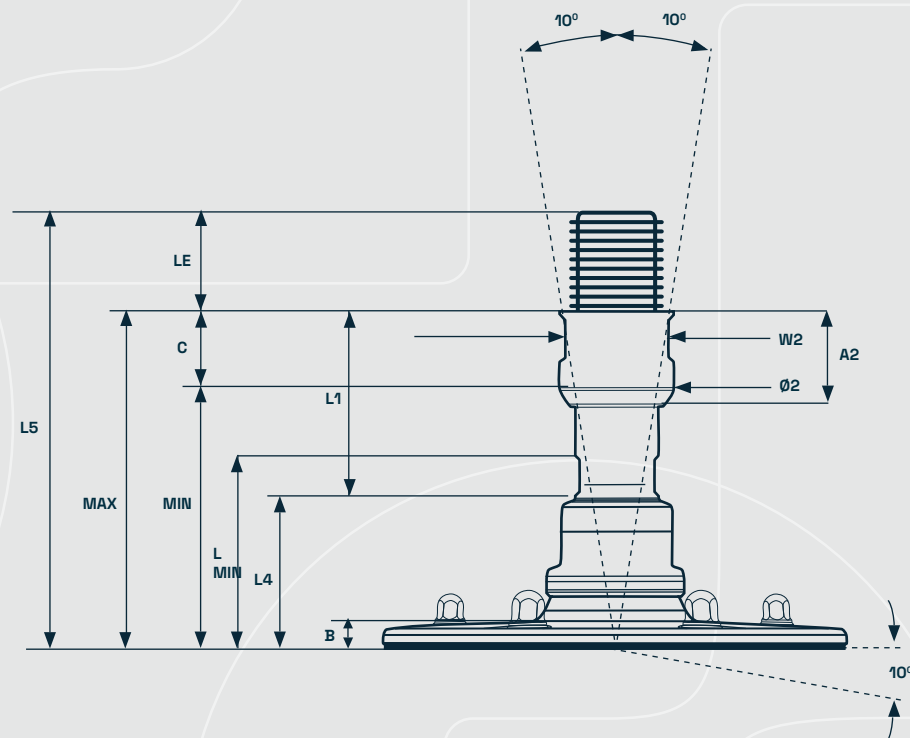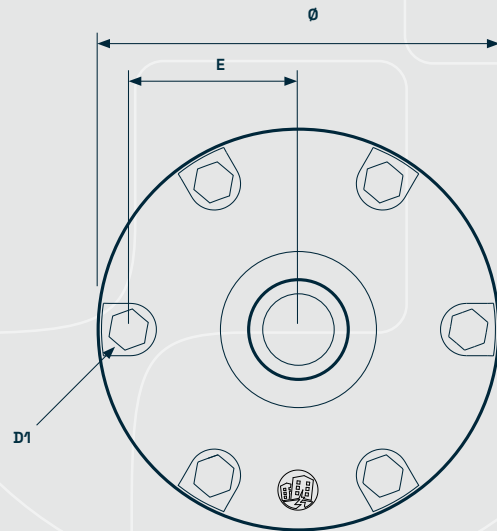

Certified hygienic Seismic levelling feet - XHJSE (L)



FOOT PLATE



SPINDLE



SLEEVE



PRODUCT CODE	FOOT - SPINDLE - SLEEVE
EXAMPLE	XHJSE300(L) - XHJSE80310 - RHOXS80115

TYPE	DIAMETER Ø [mm]	HEIGHT B [mm]	HOLES [PSC]	BOLT TYPE [SIZE]	POSITION E [mm]	NOM. PULL TENSION [N]	ITEM CODE
250	249	22	3	M16x240	101	63000	XHJSE250(L)
300	299	19	4	M20x250	121	82000	XHJSE300(L)
350	349	18	6	M20x250	142	90.000	XHJSE350(L)
400	399	17	6	M24x330	166	126000	XHJSE400(L)

THREAD	HEIGHT L1 [mm]	HEIGHT L4 [mm]	HEIGHT L5 [mm]	L MIN [mm]	NOM LOAD COMPRESSION [N]	MAX HORIZONTAL LOAD SHEAR [N]	ITEM CODE
M56	138	118	314	151	188.000	11.800	XHJSE(L)56200
M56	203	118	379	156	188.000	8.000	XHJSE(L)56260
M64	143	118	319	156	236.000	17.800	XHJSE(L)64200
M64	203	118	379	156	236.000	12.500	XHJSE(L)64260
M72	166	129	380	170	327.000	22.200	XHJSE(L)72250
M72	226	129	438	170	327.000	16.300	XHJSE(L)72310
M80	166	129	380	170	432.000	30.800	XHJSE(L)80250
M80	226	129	438	170	432.000	22.600	XHJSE(L)80310
M90	166	129	380	170	432.000	50.500	XHJSE(L)90250
M90	226	129	438	170	432.000	37.100	XHJSE(L)90310

THREAD	W2 [mm]	DIAMETER Ø2 [mm]	HEIGHT A2 [mm]	ADJUSTMENT C [mm]	LEVelling MAX [mm]	LEVelling MIN [mm]	ITEM CODE
M56	65	69,5	70	35	256	221	RHOXS5670
M56	65	69,5	100	65	321	256	RHOXS56100
M64	75	79,5	70	35	261	226	RHOXS6470
M64	75	79,5	100	65	321	256	RHOXS64100
M72	80	88	85	40	295	255	RHOXS7285
M72	80	88	115	70	355	285	RHOXS72115
M80	90	99,5	85	40	295	255	RHOXS8085
M80	90	99,5	115	70	355	285	RHOXS80115
M90	95	104	85	40	295	255	RHOXS9085
M90	96	104	115	70	355	285	RHOXS90115






Maximum nominal load = Depends on horizontal forces, request load diagram
Tolerance of total height = +/-1,5 mm

Fully-threaded seismic levelling feet - HXJE (S)

The design and patent protected seismic HXJE (S) levelling foot is the optimal choice for all machinery, equipment, tanks and vessels located in areas subject to earthquakes and at the same time need to benefit from a long levelling range.

- Simple and fast installation with height-adjustable compact design
- Movable set-up - no concrete molding required
- Total seismic stability through bolted fastening and patented locking mechanism
- Verified through Finite Element Analysis (FEA) and calculated according to New Zealand seismic standard (NZS 4219)
- Seismic anchors chosen and approved by our experienced partner Hilti
- Stainless steel AISI 304/A2, 1.4301. Optional AISI 316/A4, 1.4401

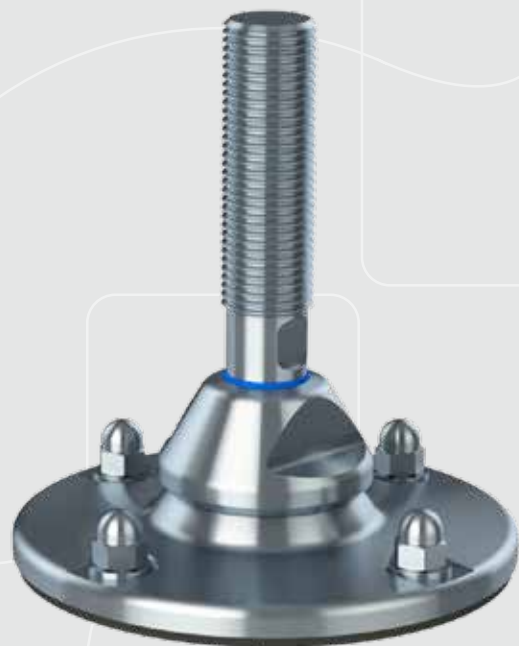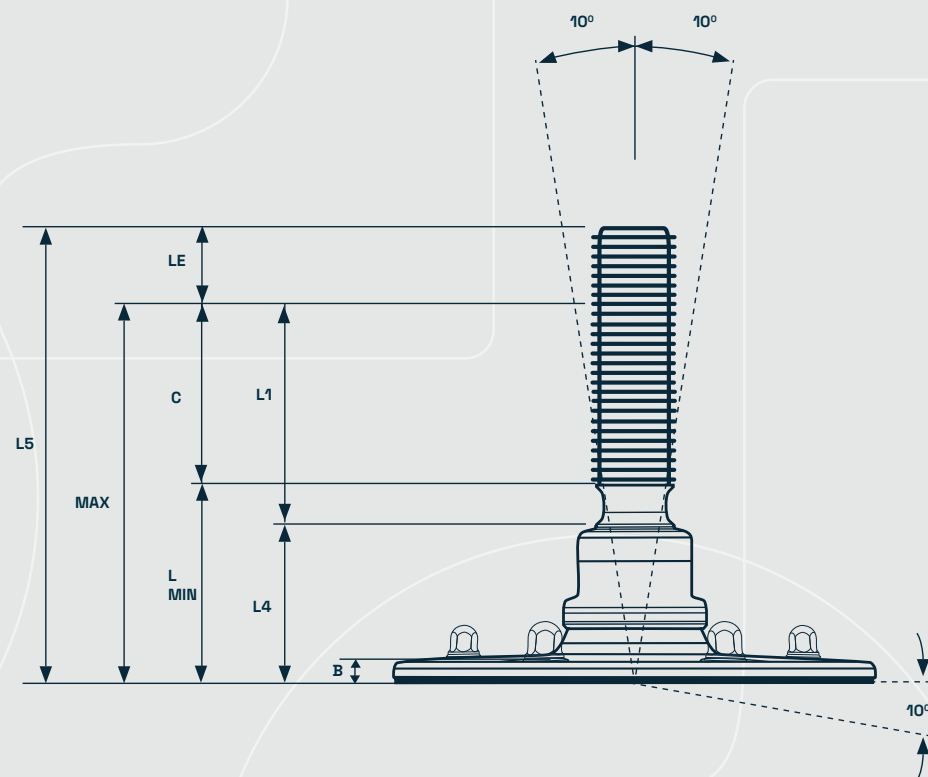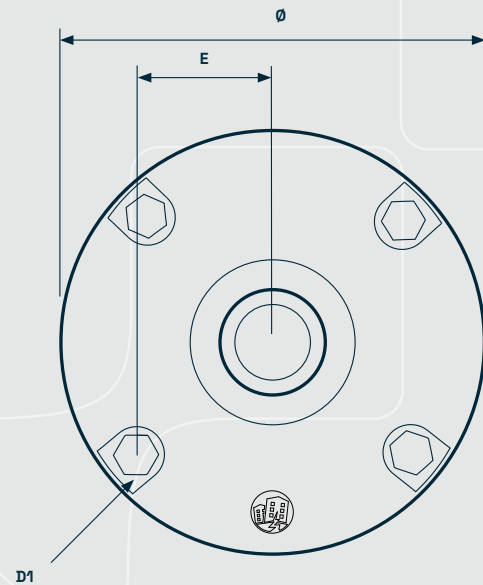


Fully-threaded seismic levelling feet - HXJE (S)



FOOT PLATE



SPINDLE

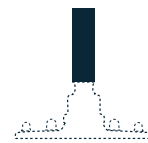

PRODUCT CODE FOOT - SPINDLE

EXAMPLE HXJE150(S)-HXE30150

TYPE	DIAMETER \varnothing [mm]	HEIGHT B [mm]	HOLES [PSC]	BOLT TYPE [SIZE]	POSITION E [mm]	NOM. PULL TENSION [N]	ITEM CODE
150	149	19	3	M10x160	60	28000	HXJE150(S)
200	199	16,5	4	M12x155	80	38000	HXJE200(S)
250	249	15	4	M16x205	101	61.000	HXJE250(S)
300	299	12	6	M20x250	121	80000	HXJE300(S)

THREAD	HEIGHT L1 [mm]	HEIGHT L4 [mm]	HEIGHT L5 [mm]	L MIN* [mm]	NOM LOAD COMPRESSION [N]	MAX HORIZONTAL LOAD SHEAR [N]	ITEM CODE
M30	127	77	228	105	60.000	2100	HXE(S)30150
M30	187	77	288	105	60.000	1300	HXE(S)30210
M36	115	77	221	105	96.000	3500	HXE(S)36150
M36	182	77	288	105	96.000	2200	HXE(S)36210
M42	117	82	233	110	140.000	4900	HXE(S)42150
M42	182	82	298	110	140.000	3200	HXE(S)42210
M48	163	82	283	120	140.000	6900	HXE(S)48200
M48	223	82	343	120	140.000	4800	HXE(S)48260
M56	151	82	278	120	140.000	13100	HXE(S)56200
M56	216	82	343	120	140.000	8900	HXE(S)56260





*L MIN is calculated without use of nut on spindle

Fully-threaded seismic levelling feet - HXJE (L)

The design and patent protected seismic HXJE (L) levelling foot is the optimal choice for all machinery, equipment, tanks and vessels located in areas subject to earthquakes and at the same time need to benefit from a long levelling range.

- Simple and fast installation with height-adjustable compact design
- Adjustment through flat at the bottom of spindle
- Movable set-up - no concrete molding required
- Total seismic stability through bolted fastening and patented locking mechanism
- Verified through Finite Element Analysis (FEA) and calculated according to New Zealand seismic standard (NZS 4219)
- Calculated according to New Zealand seismic standard NZS 4219
- Seismic anchors chosen and approved by our experienced partner Hilti
- Stainless steel AISI 304/A2, 1.4301. Optional AISI 316/A4, 1.4401

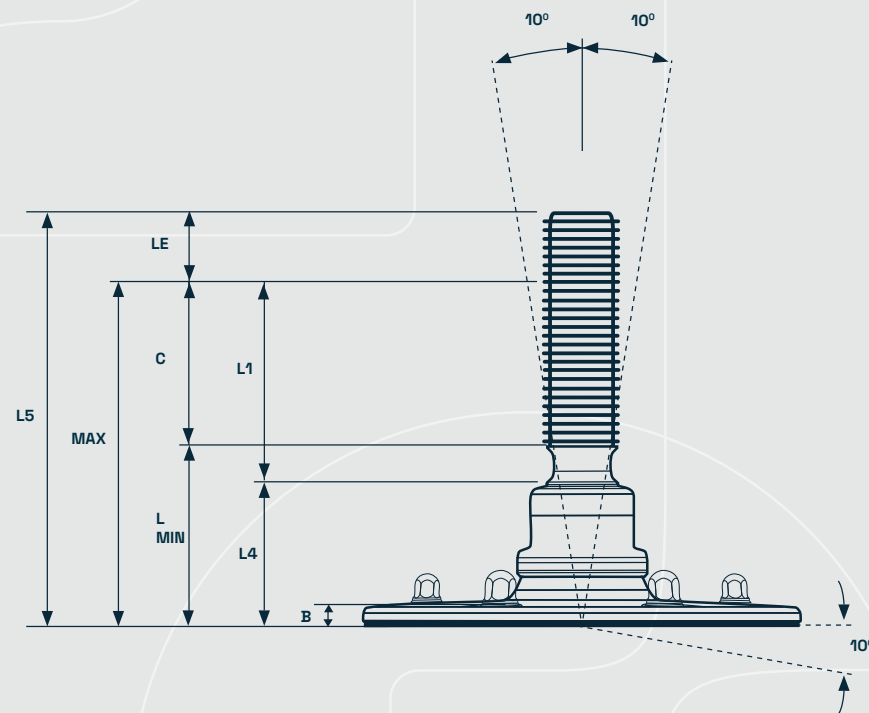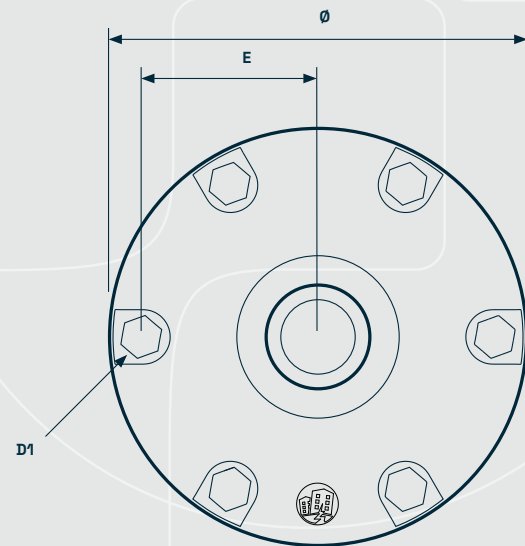

Fully-threaded seismic levelling feet - HXJE (L)




PRODUCT CODE

FOOT - SPINDLE

EXAMPLE


HXJE300(L)-HXE80250

FOOT PLATE

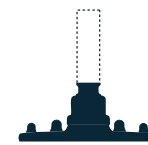

	TYPE	DIAMETER Ø [mm]	HEIGHT B [mm]	HOLES [PSC]	BOLT TYPE [SIZE]	POSITION E [mm]	NOM. PULL TENSION [N]	ITEM CODE
	250	249	22	3	M16x240	101	63000	HXJE250(L)
	300	299	19	4	M20x250	121	82000	HXJE300(L)
	350	349	18	6	M20x250	142	90.000	HXJE350(L)
	400	399	17	6	M24x330	166	126000	HXJE400(L)

SPINDLE

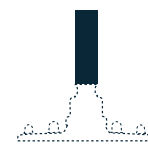

	THREAD	HEIGHT L1 [mm]	HEIGHT L4 [mm]	HEIGHT L5 [mm]	L MIN* [mm]	NOM LOAD COMPRESSION [N]	MAX HORIZONTAL LOAD SHEAR [N]	ITEM CODE
	M56	151	118	314	199	188.000	11800	HXE(L)56200
	M56	216	118	379	199	188.000	8000	HXE(L)56260
	M64	150	118	319	206	236.000	17800	HXE(L)64200
	M64	210	118	379	206	236.000	12500	HXE(L)64260
	M72	193	129	380	223	327.000	22200	HXE(L)72250
	M72	251	129	438	223	327.000	16300	HXE(L)72310
	M80	187	129	380	234	432.000	30800	HXE(L)80250
	M80	145	129	438	234	432.000	22600	HXE(L)80310
	M90	179	129	380	241	432.000	50500	HXE(L)90250
	M90	237	129	438	241	432.000	37100	HXE(L)90310





*L MIN is calculated without use of nut on spindle

Fully-threaded seismic levelling feet - HXJCFE (S)

The design and patent protected seismic HXJCFE (S) levelling foot is the optimal choice for all machinery, equipment, tanks and vessels located in areas subject to earthquakes and at the same time need to benefit from a long levelling range.

- Anchors decentered at one side of the spindle
- Easier installation when machine restricts access to all sides of the footplate
- Lower seismic performance than round footplate
- Available in one size for small and one size for large
- Simple and fast installation with height-adjustable compact design
- Adjustment through flat at the bottom of spindle
- Movable set-up - no concrete molding required
- Total seismic stability through bolted fastening and patented locking mechanism
- Verified through Finite Element Analysis (FEA) and calculated according to New Zealand seismic standard (NZS 4219)
- Calculated according to New Zealand seismic standard NZS 4219
- Seismic anchors chosen and approved by our experienced partner Hilti
- Stainless steel AISI 304/A2, 1.4301. Optional AISI 316/A4, 1.4401

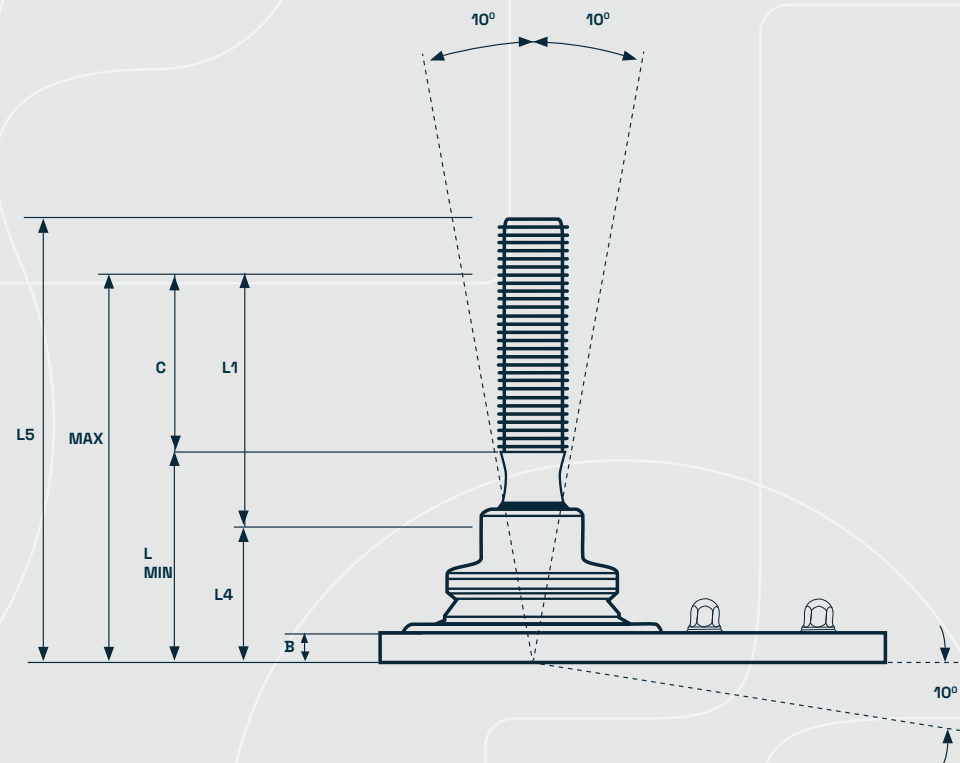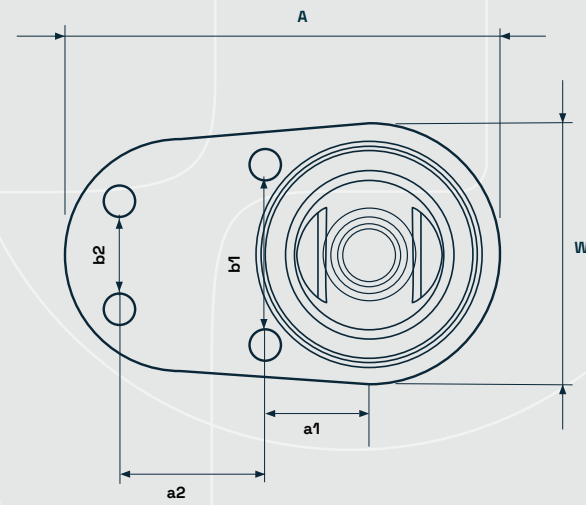

Fully-threaded seismic levelling feet - HXJCFE (S)



PRODUCT CODE

FOOT - SPINDLE

EXAMPLE

HXJCFE300(I)-HXE72250

FOOT PLATE



TYPE	DIAMETER Ø [mm]	HEIGHT B [mm]	HOLES [PSC]	BOLT TYPE	POSITION E [mm]	NOM. PULL TENSION (N)	ITEM CODE
150	150X250	15	4	M12x155	60X104 : 143x64	17000	HXJCFE150(s)

SPINDLE



THREAD	HEIGHT L1 [mm]	HEIGHT L4 [mm]	HEIGHT L5 [mm]	L MIN* [mm]	NOM LOAD [N]	MAX HORIZONTAL LOAD SHEAR [N]	ITEM CODE
M30	116	77	228	105	60.000	2100	HXE(s)30150
M30	178	77	288	105	60.000	1300	HXE(S)30210
M36	114	77	221	105	96.000	3500	HXE(S)36150
M36	179	77	288	105	96.000	2200	HXE(S)36210
M42	118	82	233	110	140.000	4900	HXE(S)42150
M42	179	82	298	110	140.000	3200	HXE(S)42210
M48	143	82	283	120	140.000	6900	HXE(S)48200
M48	203	82	343	120	140.000	4800	HXE(S)48260
M56	138	82	278	120	140.000	13100	HXE(S)56200
M56	203	82	343	120	140.000	8900	HXE(S)56260





*L MIN is calculated without use of nut on spindle

Fully-threaded seismic levelling feet - HXJCFE (L)

The design and patent protected seismic HXJCFE (L) levelling foot is the optimal choice for all machinery, equipment, tanks and vessels located in areas subject to earthquakes and at the same time need to benefit from a long levelling range.

- Anchors decentered at one side of the spindle
- Easier installation when machine restricts access to all sides of the footplate
- Lower seismic performance than round footplate
- Available in one size for small and one size for large
- Simple and fast installation with height-adjustable compact design
- Adjustment through flat at the bottom of spindle
- Movable set-up - no concrete molding required
- Total seismic stability through bolted fastening and patented locking mechanism
- Verified through Finite Element Analysis (FEA) and calculated according to New Zealand seismic standard (NZS 4219)
- Calculated according to New Zealand seismic standard NZS 4219
- Seismic anchors chosen and approved by our experienced partner Hilti
- Stainless steel AISI 304/A2, 1.4301. Optional AISI 316/A4, 1.4401

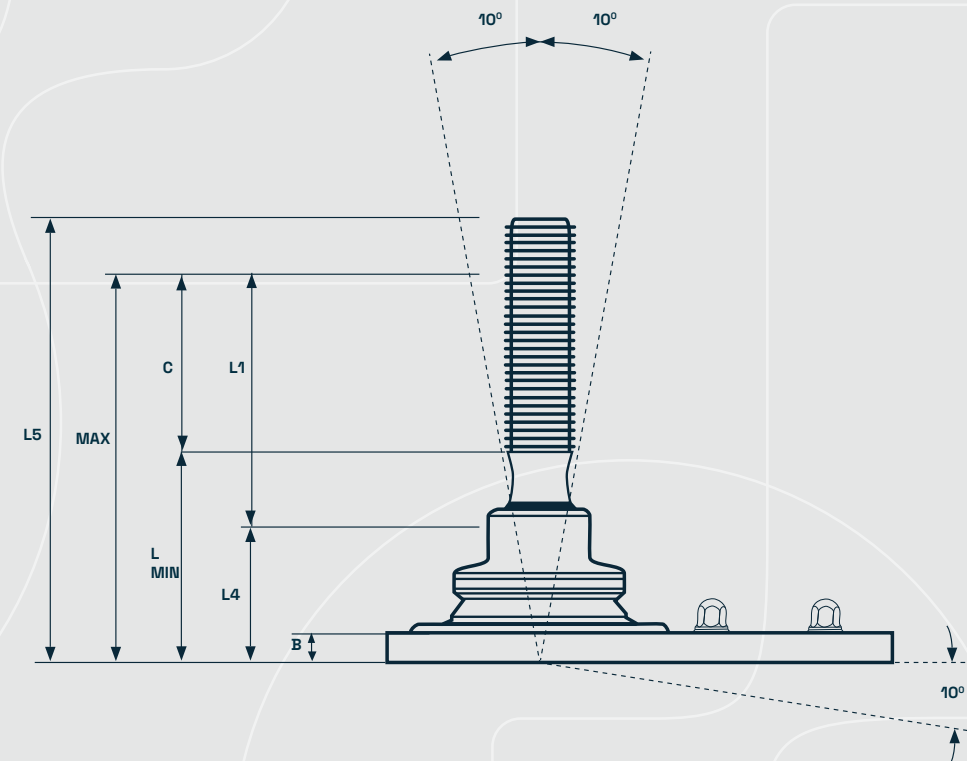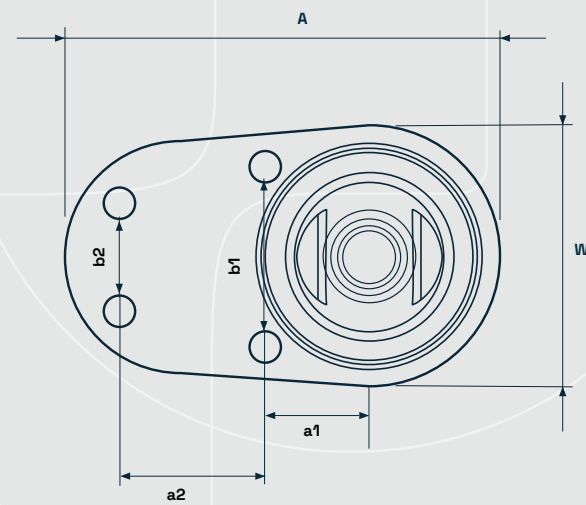

Fully-threaded seismic levelling feet - HXJCFE (L)



PRODUCT CODE FOOT - SPINDLE

EXAMPLE

HXJCFE300()-HXE72250

FOOT PLATE



TYPE	DIAMETER Ø [mm]	HEIGHT B [mm]	HOLES [PSC]	BOLT TYPE	POSITION E	NOM. PULL (TENSION)	ITEM CODE
300	300X400	15	4	M16x240	86x214:200x120	30000	HXJCFE300()

SPINDLE




THREAD	HEIGHT L1 [mm]	HEIGHT L4 [mm]	HEIGHT L5 [mm]	L MIN [mm]	NOM LOAD [N]	MAX HORIZONTAL LOAD SHEAR [N]	ITEM CODE
M56	138	82	278	120	140.000	13100	HXE(S)56200
M56	203	82	343	120	140.000	8900	HXE(S)56260
M64	143	118	319	156	236.000	17800	HXE(L)64260
M64	203	118	379	156	236.000	12500	HXE(L)64260
M72	166	129	380	170	327.000	22200	HXE(L)72250
M72	226	129	438	170	327.000	16300	HXE(L)72310
M80	166	129	380	170	432.000	30800	HXE(L)80250
M80	226	129	438	170	432.000	22600	HXE(L)80310
M90	166	129	380	170	432.000	50500	HXE(L)90250
M90	226	129	438	170	432.000	37100	HXE(L)90310



*L MIN is calculated without use of nut on spindle

Cleaning & Maintenance

Seismic levelling feet

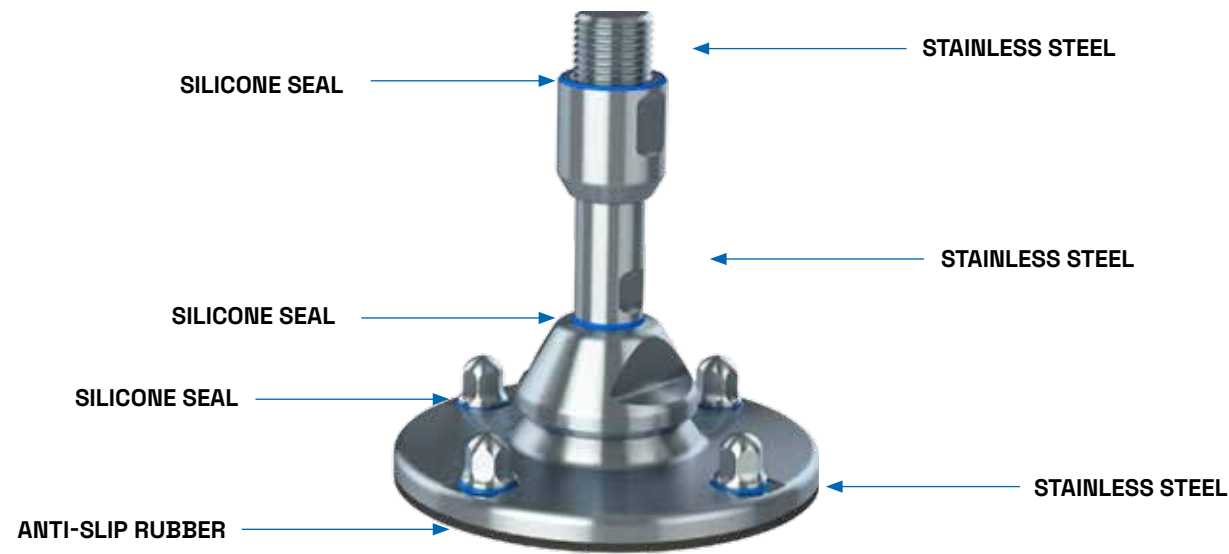

CLEANING

1. Rinse with water (maximum temperature ~40°C on proteins).
2. Distribute and cover all surfaces with foaming alkaline detergent for minimum 10 minutes. All standard products within the industry can be used. Follow supplier recommendations for temperature (maximum 100°C) and concentration depending on foaming detergent.
3. Rinse with hot water (maximum 100°C) with low-medium pressure (approximately 8-12 bar) until it is visibly clean. Cleaning of the levelling foot including sealings and dome-headed nuts can normally be done with a spraying nozzle pointing in a downwards direction approximately 45°. For heavy duty cleaning a more direct-oriented nozzle can be necessary. Be careful not to damage the sealings if high pressure cleaning is used. Keep nozzle at minimum 200-300 mm distance.
4. Mechanical cleaning may be necessary if the levelling foot is severely soiled. Cleaning must be executed with a soft brush or soft plastic scraper together with a more direct pointing nozzle spray. Steel scraper, steel brush or other sharp metallic tools are strictly prohibited, since the sealings can be severely damaged and the steel surfaces will be scratched.

MAINTENANCE

1. If the sealings on the sleeve are damaged they must be replaced. Always use genuine spare parts from NGI.
2. If the sealing between the foot and the spindle is damaged, replace the whole levelling foot and install a new one. An assembled levelling foot cannot be separated.
3. Load on the levelling foot must be obtained in order for the footplate to be hygienically sealed to the floor.
4. For a levelling foot for floor fixing always make sure that the floor fixing nut or bolt is tightened as specified in the installation manual. Tighten if necessary. If replacement of nuts or washers is always use genuine spare parts from NGI.
5. If any readjustments are necessary the levelling foot and the nearest surroundings must be cleaned carefully to prevent any soil from entering the sleeve.

BEST PRACTICE

- ✓ Position machine to neighboring machine first. Start with the feet closest to neighbor machine. Level with a laser measurement device.
- ✓ Keep machine supports (crane, jack, forklift) near to machine throughout the levelling process for fast response to sudden unexpected events. Ensure that machine never tilts during installation.
- ✓ If using more than 3 levelling feet, make sure that all feet carry weight.
- ✓ Try turning the foot to check if foot is supporting weight.
- ✓ Clean the feet and the floor before feet are lowered to the floor.

DO NOT

- ✗ Do not fasten the levelling feet to the floor until it is fully levelled.
- ✗ Do not lift the machine after it is fastened to the floor.



The design and patent protected NGI Seismic levelling feet is the only hygienic seismic levelling feet in the world designed and calculated according to the international New Zealand seismic standard. The feet have self-draining surfaces, sealed movable parts and no exposed thread which secures absolute minimum cleaning and maximum product safety. Read for example one of our reference cases at our website, where GIG KARASEK has used NGI seismic levelling feet for one of their production sites.


Installation

Seismic levelling feet

It is important to follow these instructions in order to ensure the certified hygienic design and functionality. This documentation is enclosed with the levelling feet and should always be handed over to the end-user.


Preparations prior to installation

A. Prior to installation of the seismic levelling foot ensure that the foot does not exceed the slope of the floor.

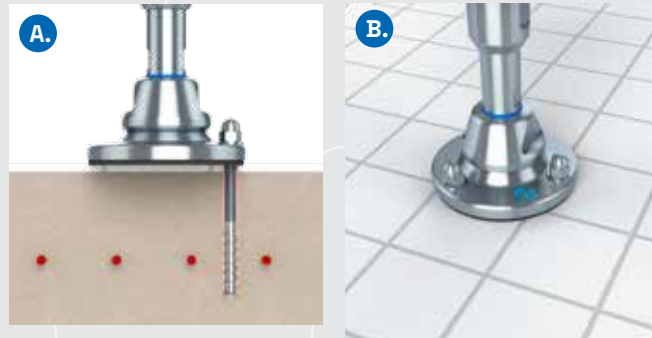

B. When installing, make sure that the footplate does not span over cracks, grout lines or other floor imperfections. If unavoidable, seal the cavity with bonding material under and around the edge of the footplate. Remove any dirt or grease from under the footplate.

C. Lift the machine with adequate machinery (e.g. jack, forklift, crane) so that seismic levelling feet can be screwed into its intended position on machine. Screw the thread into the machine until the levelling foot is in its estimated position or in the middle of the adjustment range, lower the machine down and check whether it is levelled.

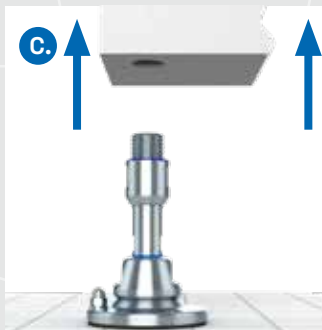


Level the machine by lifting the leg with a jack and adjust the foot to the new position. The turning of the thread is not meant to lift the machine, but only to fine-tune the height. When the machine is levelled and its location is correct, check mark foot location on the floor. See next page how to mark and drill holes.

D. Make sure that the sealing is correctly fixed on top of the sleeve. Grease the exposed thread with FoodLube Universal Grease and make sure to remove any excess grease after installation.



E. Ensure minimum engagement within the machine frame. The minimum engagement (LE) must not be smaller than the spindle diameter. Use a wrench to adjust the vertical position and make sure that the engagement is no less than the diameter of the thread.

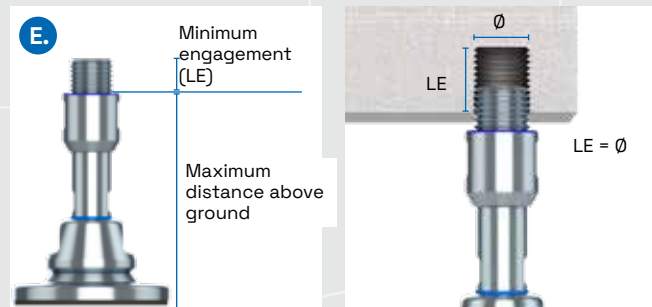

! During mounting, support weight of seismic levelling foot with suitable tools (e.g. jack), if needed. Larger sizes of seismic levelling feet can weigh up to 40 kg.

Installation

Seismic levelling feet

It is important to follow these instructions in order to ensure the certified hygienic design and functionality. This documentation is enclosed with the levelling feet and should always be handed over to the end-user.


Marking of position

1. MARK HOLES OF FOOTPLATE with dimensions outlined in footplate dimensions. Use this method with caution, as tolerances in machines might add up and assumed position of holes might not fit afterwards. Alternatively, you can mark the holes through the footplate. When the machine is positioned at its final installation location, mark all holes through the footplates of all seismic levelling feet. Ensure that holes are visibly marked on the floor.



! Drilling holes with a drill template can be risky when several seismic feet are used. Tolerances in the machine might add up so that drilled holes might not suit anymore. It is recommended to use the machine as a template for marking holes.

2. REMOVE THE MACHINE from the installation location so that all marked drilling spots are visible and easily accessible. Use appropriate machine to lift machine.

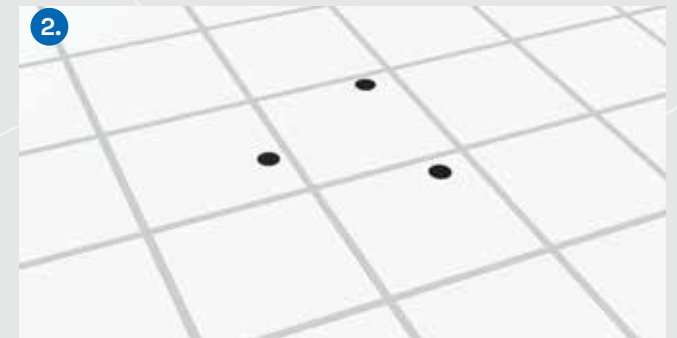

Drilling

3. DRILL & CLEAN HOLES:
Through-setting: Drill hole through the clearance holes in the footplate to the required drilling depth with a hammer drill set in rotation-hammer mode using an appropriately sized carbide drill bit. Through-setting is only allowed for HIT-Z-R anchors. HIT-Z-R anchors do not require cleaning to perform according to seismic standards.



Pre-setting: Drill holes at the marked spots to the required drilling depth with a hammer drill set in rotation-hammer mode using an appropriately sized carbide drill bit. For dust free drilling use the SAFEset™ drill bit by Hilti. Clean holes from any noticeable dust.

4. CHECK SETTING DEPTH: Mark the anchor for the required drilling depth. Compress the drilling dust as the anchor is fit into the hole until the marked depth. If it is not possible to compress the dust, remove the dust in the drill hole or drill deeper. Using Hilti equipment: When drilling with non-cleaning drill sets, the required drilling depths can vary due to accumulation of dust in the hole.



! The helixed part of HIT Z R anchors must always be fully inserted into the ground. Generally, ensure that sufficient length of thread (B+f see FOOTPLATE DIMENSIONS) is above ground and insert remaining length of anchor into the ground. Drilling depths are different for cleaned holes and uncleaned holes. Check for correct drilling depths under FOOTPLATE DIMENSIONS.



Installation

Seismic levelling feet

It is important to follow these instructions in order to ensure the certified hygienic design and functionality. This documentation is enclosed with the levelling feet and should always be handed over to the end-user.

Levelling & fastening

5. PLACE THE MACHINE: Move the machine back to the final installation location so that holes on the floor match with holes in the footplate.

6. FIXATE THE MACHINE: Fixate the position of the machine by putting two anchors through the footplates and into the holes of all seismic levelling feet.



Do not use mortar at this point!

7. LEVEL & LOCK: The levelling process can be divided into two steps:
a) Height adjustment and
b) Fine adjustment / levelling of weight.

Whereas step a) refers to the rough adjustment of height with levelling ranges of >2mm, step b) deals with the fine adjustment of a few millimeters.

8. ROUGH HEIGHT ADJUSTMENT >2MM: Adjust and level machine by turning the spindle clockwise or anticlockwise. Ensure that machine is fully levelled in height and angle before any mortar is used.





1. Ensure that all footplates rest on floor and carry weight (see description above).
2. Check levelling of machine with suitable device (e.g. laser measuring device, spirit level).
3. Fine tune the height of the machine by turning the spindle clockwise for lowering or anti-clockwise for elevating.
4. Repeat steps 1 to 3 until fully levelled.



Always lift machine to undertake rough height adjustment of spindles. Generally, this applies to adjustments of more than 2mm in height.

9. FINE ADJUSTMENT / LEVELLING OF WEIGHT: Ensure that the weight of machine is equally distributed on all levelling feet. This can be done by attempting to lift the machine by turning the spindle minimally. All feet should require the same torque to do this. This step requires to “feel” the required torque to lift the machine by turning the spindle.

1. Ensure that all footplates rest on floor and carry weight (see description above).
2. Check levelling of machine with suitable device (e.g. laser measuring device, spirit level).
3. Fine tune the height of the machine by turning the spindle clockwise for lowering or anti-clockwise for elevating.
4. Repeat steps 1 to 3 until fully levelled

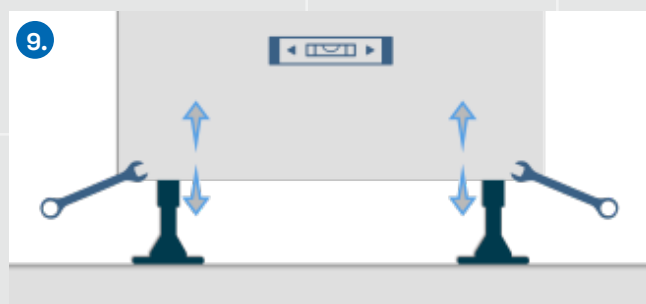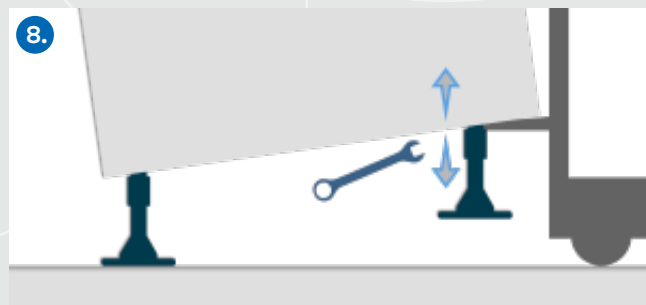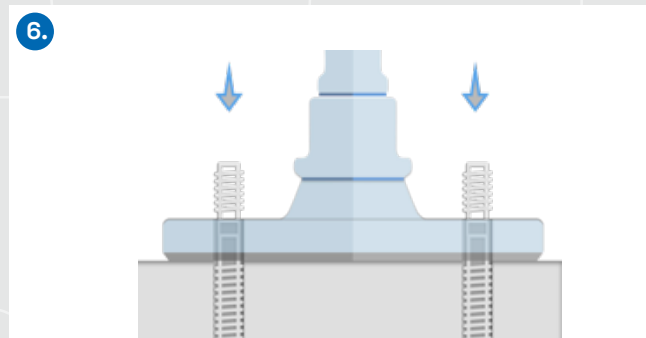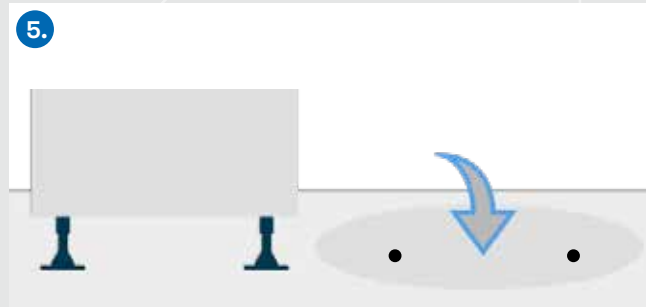

The turning of the thread now is not meant to lift the machine, but only to fine-tune the height. Do not level machine under full weight. Lower machine by clockwise turning, elevate machine by anticlockwise turning.

Installation

Seismic levelling feet

It is important to follow these instructions in order to ensure the certified hygienic design and functionality. This documentation is enclosed with the levelling feet and should always be handed over to the end-user.

Locking of spindle to the footplate and machine

10. LOCK THE SPINDLE TO THE FOOTPLATE: Lock the spindle to the footplate by turning the top nut clockwise with required torque.




Locking the top nut increases the strength of the seismic levelling foot to obtain highest possible safety against bending. As it is not possible to guarantee a complete locking of spindle to footplate and thus, movement during earthquakes, a freely moving joint is assumed. Any locking of the top nut therefore increases the strength of the seismic levelling foot

11. LOCK SLEEVE OR COUNTER NUT TO MACHINE: Turn the sleeve anti-clockwise up to its highest position to cover the thread in between machine and sleeve. The sleeve is not designed to carry any weight. It is used to fulfill hygienic requirements and to act as a counter nut to the machine.



Always ensure that the sleeve can cover the whole length of the thread. If not, the minimum level of engagement is not met and the strength of the levelling foot is not guaranteed.

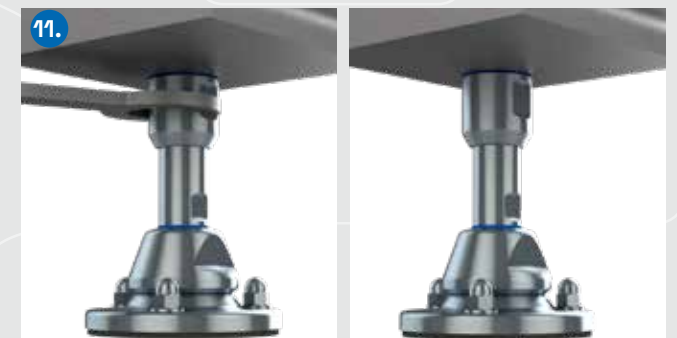

Installation

Seismic levelling feet

It is important to follow these instructions in order to ensure the certified hygienic design and functionality. This documentation is enclosed with the levelling feet and should always be handed over to the end-user.

Fasten the foot to the floor

12. REMOVE FIXATING ANCHORS: Remove any lose anchors that were put into place during step 11.

13. INJECT MORTAR: Inject adhesive from the ground of the borehole without forming air voids, starting at the bottom of the hole, slowly withdrawing the mixer with each trigger pull.

As a rule of thumb, fill holes 50% with mortar for through setting, or as required to ensure that the annular gap between the anchor and the concrete is completely filled with adhesive along the embedment length. Fill up the holes of the footplate with mortar to add additional stability.

Find the required amount of mortar in the footplate datasheet or in table 3.


14. INSTALL ANCHOR: Install anchor through positioned footplate. Remove any excess mortar on the top side of the footplate. Ensure that anchors are installed before mortar's working time t_{work} has elapsed, see table 1. It is recommended to install all anchors of one footplate before moving on to other levelling feet to avoid hardening of mortar before all anchors are installed. If anchors are too long, cut off excessive length with appropriate tooling.



Install anchors only when machine is fully levelled. Once anchors are installed, horizontal adjustment of machine is limited to very small changes. If major height adjustments are needed, lift machine with caution to not damage the already dried up mortar. Then, repeat procedure outlined in step 3a and 3b.

Damage to dried mortar can result in complete loss of seismic strength of the anchors.

15. FASTEN FOOT: After curing time t_{cure} has elapsed, see table 1, use the washer and dome-headed nut to fasten the seismic levelling foot to the floor. Set washers (DIN 125A) and dome headed nuts (DIN 1587) at the anchor rod and tighten them with the maximum tightening torque according to table 3.

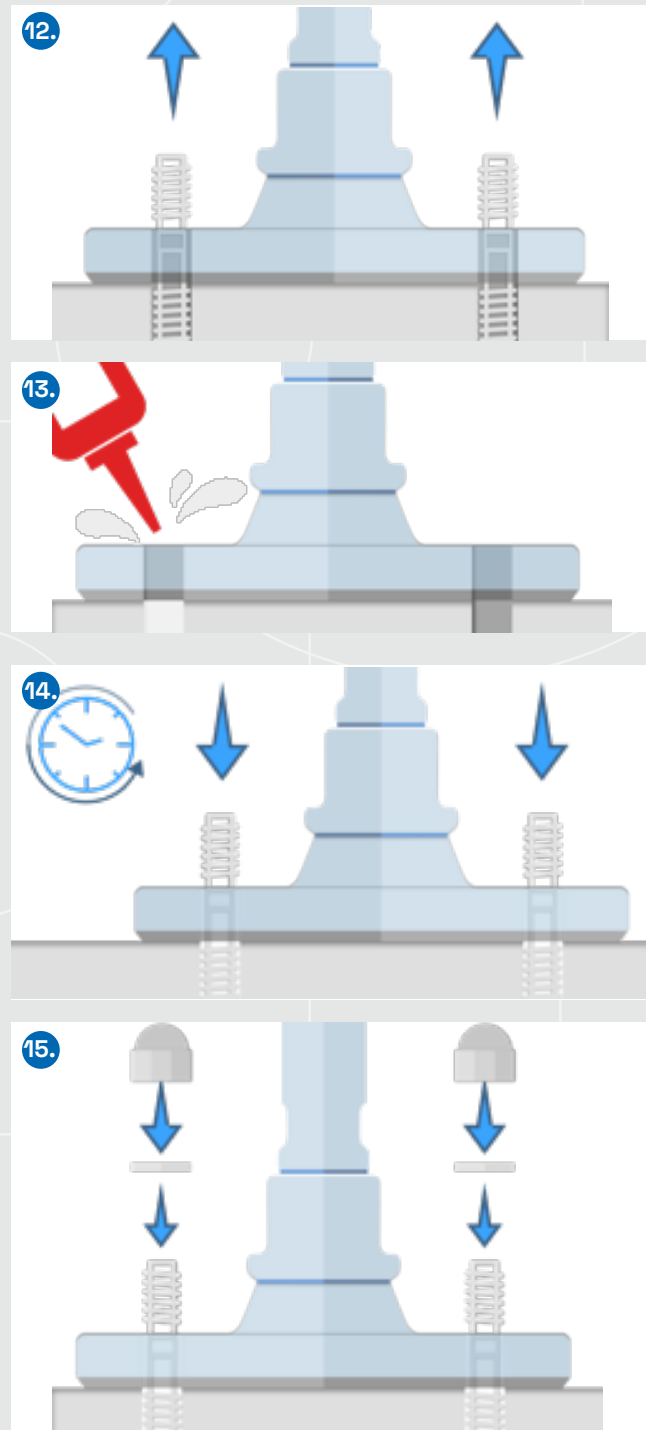

Installation steps

Seismic levelling feet

The installation of the seismic levelling foot can be done through either one of the following three methods. Detailed descriptions of the steps can be found in the installation manual at the previous pages.

	TASK	STEP	THROUGH FIXING	DRILLING WITH TEMPLATE	USE MACHINE AS TEMPLATE
METHOD			When all sides of the seismic levelling foot can be reached with a drilling machine, while feet are installed on machine.	When the exact position of the feet is known and holes can be drilled prior to machine installation.	Levelling foot are not reachable with a drilling machine when feet are installed on machine or final position of machine needs to be determined during installation.
MARK	Mark holes	1.	✗	✓	✓
	Remove the machine	2.	✗	✗	✓
DRILLING AND LEVELLING	Drill & clean holes	3.	✓	✓	✓
	Check setting depth	4.	✓	✓	✓
	Place the machine	5.	✗	✓	✓
	Fixate the machine	6.	✓	✓	✓
LOCKING OF SPINDLE	Rough height adjustment	8.	✓	✓	✓
	Fine adjustment / levelling of weight	9.	✓	✓	✓
	Lock spindle to the footplate	10.	✓	✓	✓
FASTEN THE FOOT TO F THE LOOR	Lock sleeve or counter nut to machine	11.	✓	✓	✓
	Remove the fixating anchors	12.	✓	✓	✓
	Inject the motar	13.	✓	✓	✓
	Install the anchor	14.	✓	✓	✓
	Fasten the foot	15.	✓	✓	✓

Tables

Seismic levelling feet

MORTAR	TEMPERATURE OF BASE MATERIAL		INSTALLATION TIMES HIT-V ANCHORS		INSTALLATION TIMES HIT-Z ANCHORS	
	[°C]	[° F]	t,work	t,cure	t,work	t,cure
Table 1	-10...-5	14...23	1.5 h	7 h	-	-
	> -5...0	> 23...32	50 min	4 h	-	-
	> 0...5	> 32...41	25 min	2 h	-	-
	> 5...10	> 41...50	15 min	75 min	15 min	75 min
	> 10...20	> 50...68	7 min	45 min	7 min	45 min
	> 20...30	> 68...86	4 min	30 min	4 min	30 min
	> 30...40	> 86...104	3 min	30 min	3 min	30 min

SPINDLE	SPINDLE SIZE	MINIMUM RECOMMENDED LENGTH OF ENGAGEMENT	TIGHTENING TORQUE COUNTER NUT
Table 2	M30	30	740
	M36	35	1300
	M42	40	*
	M48	45	*
	M56	55	*
	M64	65	*
	M72	70	*
	M80	80	*
	M90	90	*

ANCHOR	ANCHOR TYPE	TYPE	TIGHTENING TORQUE	REQUIRED MORTAR**
Table 3	HIT-Z-R	M10x135	25	13
	HIT-Z-R	M10x160	25	13
	HIT-Z-R	M12x155	40	18
	HIT-Z-R	M12x196	40	18
	HIT-Z-R	M16x205	80	34
	HIT-Z-R	M16x240	80	39
	HIT-Z-R	M20x250	150	60
	HIT-V-R	M24x330	200	135


**Includes filling up the annular gap in the footplate for providing additional horizontal stability.
*These values are only valid as guidelines, not exact values due to the geometry of the counter nut.

Exact tightening values cannot be determined, therefore calculation of the seismic foot assume the worst case that the counter nut is loose during an earthquake.


Footplate dimensions

Seismic levelling feet - small

All dimensions for standard footplate sizes for SMALL footplates.

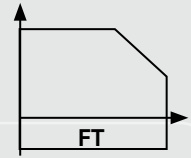


HXJCFE FOOTPLATE

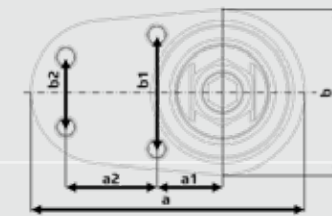

XHJSE FOOTPLATE



INSTALLATION DIMENSIONS

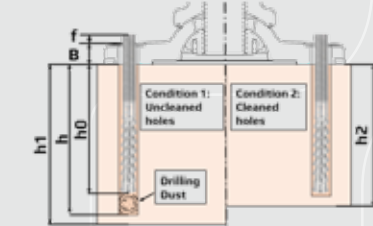

1) GENERAL (all footplates)

- 1.1 Mortar
- 1.2 Proof of calculation
- 1.3 Installation method
- 1.4 Base material (Concrete quality)

HIT-HY 200
Design method ACI 318-08 / Chem
Hammer drilled hole, Installation condition: Dry
Cracked concrete, C20/25, $f_c' = 2901$ psi; Temp. short/long: 40/24 °C
An improved concrete quality can greatly improve the performance of the used anchors.

2) DIMENSIONS [mm]


		HXJCFE150(S) a	XHJE150(S) b	XHJE200(S) c	XHJE250(S) d
2.1 Dimensions	bxa or Ø	150x250	150	200	250
2.2 Position	a1xb1; a2xb2 or E	60x104; 143x64	60	80	101
2.3 Thickness footplate	B	15	20	20	20
2.4 Height nut & washer	f	12.5	10	12.5	16
2.5 Setting depth	h	125	120	120	170
2.6 Concrete depth 1	h1	185	180	180	270
2.7 Concrete depth 2	h2	155	150	150	200

3) ANCHORS

		HXJCFE150(S)	XHJE150(S)	XHJE200(S)	XHJE250(S)
3.1 Amount	-	4	3	4	4
3.2 Type	-	HIT-Z-R	HIT-Z-R	HIT-Z-R	HIT-Z-R
3.3 Thread size x Length	[mm]	M12x155	M10x160	M12x155	M16x205
3.4 Drill diameter	[mm]	14	12	14	18
3.5 Tightening torque	[Nm]	40	25	40	80
3.6 Mortar per footplate	[ml]	68	42	68	128

4) TENSION CAPACITY FT

		HXJCFE150(S)	XHJE150(S)	XHJE200(S)	XHJE250(S)
4.1 Max Tension (FH1IFT1)	[kN]	4 -17	13 -28	12 -38	14 -61
4.2 Reduced Tension (FH2IFT2)	[kN]	15 -11	30 -13	30 -30	30 -55
4.3 No Tension (FH3IFT3)	[kN]	22 0	-	-	-

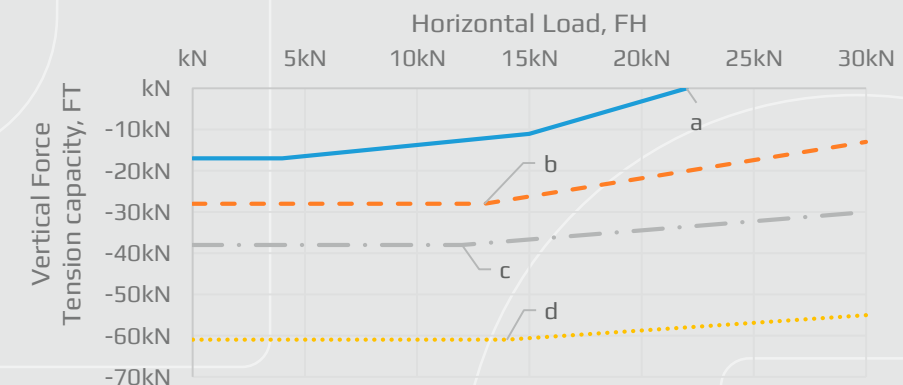


Note: Tension capacity only shown up to FH=30kN, as largest possible spindle to combine with is limited to 30kN.


Footplate dimensions

Seismic levelling feet - large

All dimensions for standard footplate sizes for LARGE footplates.

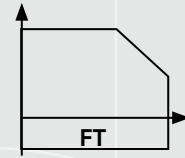


HXJCFE FOOTPLATE

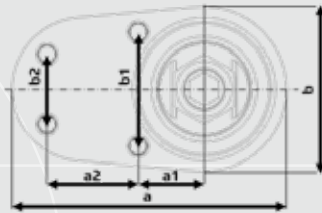

XHJSE FOOTPLATE



INSTALLATION DIMENSIONS

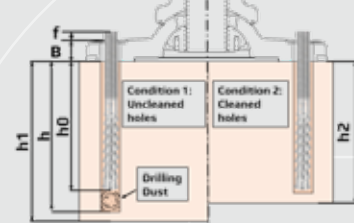

1) GENERAL (all footplates)

1.1 Mortar	HIT-HY 200
1.2 Proof of calculation	Design method ACI 318-08 / Chem
1.3 Installation method	Hammer drilled hole, Installation condition: Dry
1.4 Base material (Concrete quality)	Cracked concrete, C20/25, $f_c' = 2901$ psi; Temp. short/long: 40/24 °C An improved concrete quality can greatly improve the performance of the used anchors.

2) DIMENSIONS [mm]


		HXJCFE300(L) a	XHJE250(L) b	XHJE300(L) c	XHJE350(L) d	XHJE400(L) e
2.1 Dimension	bxa or \emptyset	300x400	250	300	350	400
2.2 Position	$a_1 \times b_1$; $a_2 \times b_2$ or E	86x216; 200x120	101	121	142	166
2.3 Thickness footplate	B	15	20	20	20	20
2.4 Height nut & washer	f	19	16	19	19	23
2.5 Setting depth	h	190	190	210	210	285
2.6 Concrete depth 1	h1	290	290	310	310	385
2.7 Concrete depth 2	h2	250	250	270	270	345

3) ANCHORS

		4	3	4	6	6
3.1 Amount	-	4	3	4	6	6
3.2 Type	-	HIT-Z-R	HIT-Z-R	HIT-Z-R	HIT-Z-R	HIT-V-R
3.3 Thread size x Length	[mm]	M16x240	M16x240	M20x250	M20x250	M24x330
3.4 Drill diameter	[mm]	18	18	22	22	28
3.5 Tightening torque	[Nm]	80	80	150	150	200
3.6 Mortar per footplate	[ml]	140	105	212	318	738

4) TENSION CAPACITY FT

		14 -39	14 -63	28 -82	41 -90	58 -126
4.1 Max Tension (FH1 FT1)	[kN]	14 -39	14 -63	28 -82	41 -90	58 -126
4.2 Reduced Tension (FH2 FT2)	[kN]	48 -20	60 -22	100 -47	100 -70	100 -110
4.3 No Tension (FH3 FT3)	[kN]	58 0	66 0	-	-	-

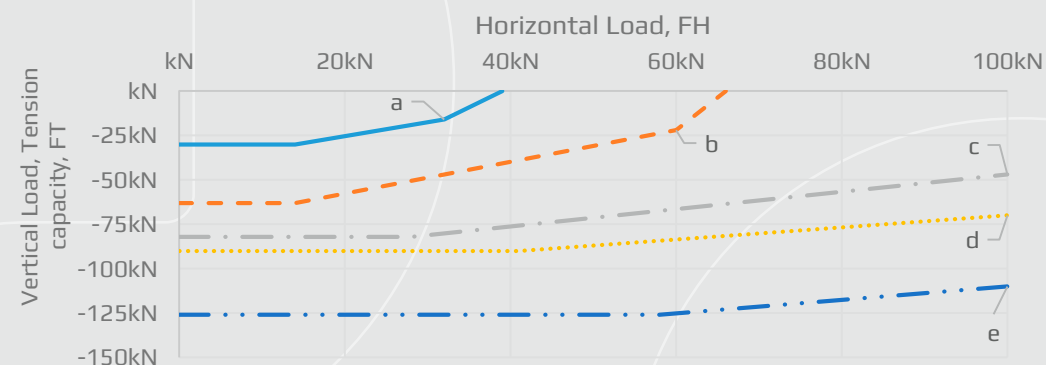

Installation

Disclaimer

Where do seismic design values come from?

Seismic design values are gathered from several sources. The United States Geological Survey (USGS) (www.usgs.gov) lists up seismic design values from around the world. Furthermore, national standards such as the NZS 4219 contain country specific seismic design values which are also taken into consideration. Lastly, the United Facility Criteria (UFC) has compiled a list of seismic design values specifically for the USA and other locations around the world.

Why does NGI use NZS 4219 and IBC 2009 instead of national standards?

NGI uses the New Zealand Standard 4219:2006 (NZS) and International Building Code 2009 (IBC) for various reasons: First, NGI has compared several national earthquake standards from around the world and has concluded that resulting forces of these standards largely depend on many assumptions made for the calculation of occurring forces during an earthquake. Although these assumptions are expressed with different words and different levels of detail, they all result in similar forces when similar sounding assumptions are made. The NZS4219 was found to be the most accessible and most comprehensible national code for estimating forces during an earthquake. Second, the IBC is used to extend seismic design values for seismic regions around the world. The IBC calls these values "seismic ground motion values". Third, NGI's core expertise lies in the design and engineering of levelling feet. The NZS and IBC are used to recommend suitable levelling feet for seismic areas. Therefore, NGI can give a quantitative estimation of seismic forces to be expected in a given location under certain assumptions. In any case, national standard codes need to be followed for any machinery delivered into seismic areas. NGI's calculations are to be understood as an estimation of forces which are not legally binding and need always be verified by the customer.

Where can I find the exact values and codes used in the seismic calculation?

The NZS and IBC are both freely available on the internet. NGI uses a simplified version of the formulas used in the NZS that is tailored towards bottom restrained equipment. This is to simplify the selection process of assumptions for the customer. Any values resulting from these assumptions are rounded up to the next reasonable integer and serves as an increased safety factor for seismic calculations.

Is my machine seismic certified when I use NGI seismic levelling feet?

NGI seismic levelling feet are designed to fasten machinery and equipment safely to the ground in case of additionally occurring forces. This can happen during earthquakes, wind loads or any other expected or unexpected horizontal and vertical loads. NGI seismic levelling feet are able to compensate forces up to a given maximum limit, as outlined in the corresponding datasheet and only when installed as described in the installation manual. NGI cannot take responsibility for any other component that is directly or indirectly attached to NGI's seismic levelling feet. It is the machine builder's responsibility to ensure that the machine as a whole is seismic certified according to the respective national seismic standard.

Can NGI also calculate forces for machines with complex geometries?

NGI calculates forces according to a static model in which forces can occur either directly at the feet or at the machine's center of gravity. NGI offers this service for all customers when the machine's geometry allows a simplification of the model. In cases when the geometry is perceived to be too complex (e.g. the center of gravity is almost above the furthest levelling foot) or not suitable for simplification, NGI reserves the right to ask the customer for a calculation of forces. In any case, calculations undertaken by NGI always need to be verified by the customer and do not replace a detailed seismic calculation or simulation of the machine.

Do I need to use the recommended HILTI anchors?

NGI's seismic levelling feet are designed to be installed with HIT V or HIT Z anchors by HILTI as outlined in the respective datasheet. The recommended anchors guarantee that NGI's seismic levelling feet can sustain the combination of vertical pull forces and horizontal shear forces. If seismic levelling feet are used in combination with any other anchors than the recommended ones, the strength of the seismic feet cannot be guaranteed and must be calculated by the customer.

Height adjustments

Seismic levelling feet

Visit our channel at Vimeo and see a short video showing how to height adjust our seismic levelling feet. Also find a quick guide below.




[See video here](#)

QUICK GUIDE OF HOW TO ADJUST SEISMIC FEET:

1. First make sure that the spindle is not locked to the foot by turning the topnut counterclockwise*
2. Adjust height as shown by turning **both** spindle and topnut clockwise with a wrench
3. Once the machine has been levelled lock the topnut by turning it clockwise.

* The spindle should not turn when unlocking. It is only when adjusting the height the topnut and spindle must turn. Maximum three full turns per foot at one time.

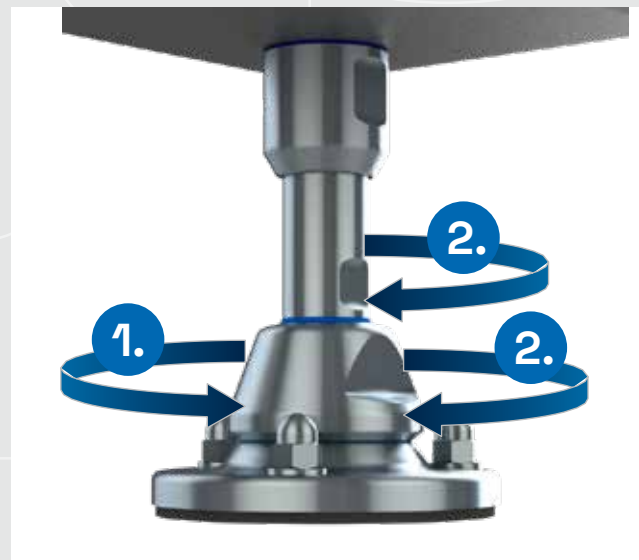

Seismic Configurator online

Make sure you choose the right seismic levelling foot

We highly recommend that you contact our specialists to make sure you choose the right seismic levelling feet for your project! At our website we have a configurator where you can fill in the requirements for your project. Afterwards the form will be sent to our seismic levelling feet specialist.

Find our configurator by scanning the below QR code and fill out the necessary information.

Based on your input, our seismic specialist will contact you regarding a non-binding solution for your seismic project.



[Find Seismic configurator here](#)

Machine Information

- Machine located at ground level
- Machine located above ground level (also intermediate level)

Minimum height of machine above ground level (m):

Max. no. of machines per m² (intermediate level):

Height above of ground level (m):

Machine geometry
(Rectangle method)

Number of supports in each direction (n):

Length (x)	n _x = <input type="text"/> supports	Width (y)	n _y = <input type="text"/> supports
Spacing of supports from end to end (m)	b _x = <input type="text"/> m	b _y = <input type="text"/> m	
Minimum distance from center of gravity to furthest support (m)	a _x = <input type="text"/> m	a _y = <input type="text"/> m	

Note: If geometry is more complex, please send a technical drawing with position of all supports and distances of all supports relative to the center of gravity, both in x and y direction.

→

Footplate Shape

- Round
- Decentered

Spindle version

- Hydraulic
- Fully-threaded
- Fully-threaded HEX on top

Safety Factor
(Calculations are done on the basis of ISO 199)

- Normal buildings
- Buildings that may contain people in crowds, or contents of high value to the community, or pose risks to people in crowds
- Buildings with special post-disaster functions

→

Accessories - HILTI tools

Hilti's seismic research includes detailed investigation of product performance under simulated seismic conditions and full scale system testing.

This multilevel approach helps to capture the complexity of fastening systems behavior under seismic conditions. Earthquakes can affect a wide range of construction products that Hilti supplies anchors for and NGI are confident that they are the best on the market today.

Hilti is pioneering research to extensively test systems for earthquake performance in order to support their customers with recommendations for design applications.



Accessories - HILTI tools

PISTOL



HILTI ITEM CODE	DESCRIPTION	ITEM CODE
Kit HDM 500	Injectable mortar dispenser	KitHDM500
Kit HDM 500-A22	Cordless electric dispenser	KitHDE500-A22

MORTAR



HILTI ITEM CODE	DESCRIPTION	AMOUNT	ITEM CODE
HIT-HY-200-A	Injectable mortar	330ml	HIT-HY-200-A

STANDARD DRILL BIT



HILTI ITEM CODE	DIMENSIONS	WORKING LENGTH	USE FOR
TE-CX 12/22	12X220	150	M10
TE-CX 14/22	14X220	150	M12
TE-CX 18/32	18X320	250	M16
TE-CX 22/48	22X480	410	M20
TE-CX 28/48	28X480	410	M24

SAFE-SET DRILL BIT



HILTI ITEM CODE	DIMENSIONS	WORKING LENGTH	USE FOR
TE-CD 12/33	12X330	240	M10
TE-CD 14/37	14X370	240	M12
TE-CD 18/37	18X370	240	M16
TE-YD 22/59	22X590	400	M20
TE-YD 28/59	28X590	400	M24

INSTALLATION PACK SMALL

FOOTPLATE	ANCHOR SIZE [Metric]	BOLT TYPE	QTY. ANCHORS, DOME-HEADED NUTS & WASHERS	ITEM CODE
HXJCFE150(S)/XHJCFE150(S)	M12x155	HIT-Z-R	4	HIT-Z-R-4M12
HXJE150(S)/XHJSE150(S)	M10x160	HIT-Z-R	3	HIT-Z-R-3M10
HXJE200(S)/XHJSE200(S)	M12x155	HIT-Z-R	4	HIT-Z-R-4M12
HXJE250(S)/XHJSE250(S)	M16x250	HIT-Z-R	4	HIT-Z-R-4M16

LARGE

HXJCFE300(L)/XHJCFE300(L)	M16x240	HIT-Z-R	4	HIT-Z-R-4M16
HXJE250(L)/XHJSE250(L)	M16x240	HIT-Z-R	3	HIT-Z-R-3M16
HXJE300(L)/XHJSE300(L)	M20x250	HIT-Z-R	4	HIT-Z-R-4M20
HXJE350(L)/XHJSE350(L)	M20x250	HIT-Z-R	6	HIT-Z-R-6M20
HXJE400(L)/XHJSE400(L)	M24x330	HIT-V-R	6	HIT-V-R-6M24

Accessories - anchors

High-performance anchor rod for injectable hybrid/epoxy anchors (A4 stainless steel).

- Material, corrosion: Stainless steel, A4
- Base materials: Concrete (cracked), Concrete (uncracked), Masonry (solid)
- PROFIS software: Yes



Accessories - anchors

ANCHOR HIT-Z-R



TYPE	DRILL DIAMETER DD [mm]	THREAD SIZE TS [MM]	LENGTH L [MM]	SETTING DEPTH (SD) [MM]	TIGHTENING TORQUE F [NM]	REQUIRED MORTAR - PER ANCHOR [ML]	ITEM CODE
M10x160	12	M10	160	120	25	13	HITZRM10x160
M12x155	14	M12	155	120	40	18	HITZRM12x155
M16x205	18	M16	205	170	80	32	HITZRM16x250
M16x240	18	M16	240	190	80	35	HITZRM16x240
M20x250	22	M20	250	210	150	53	HITZRM20x250



ANCHOR HIT-V-R



TYPE	DRILL DIAMETER DD [mm]	THREAD SIZE TS [MM]	LENGTH L [MM]	SETTING DEPTH (SD) [MM]	TIGHTENING TORQUE F [NM]	REQUIRED MORTAR - PER ANCHOR [ML]	ITEM CODE
M24x330	26	M24	330	285	200	123	HITVRM24x300

Accessories for levelling feet - dome-headed nuts

- Stainless steel AISI 304/A2, 1.4301
- Standard dome-headed nuts (DIN 1587 A2)
- All dimensions available

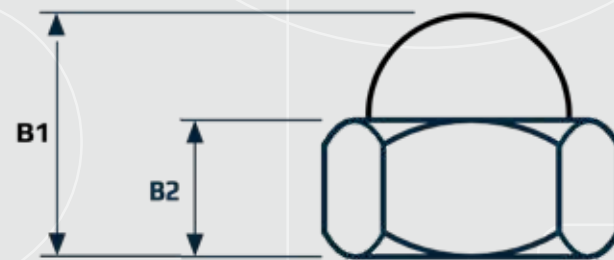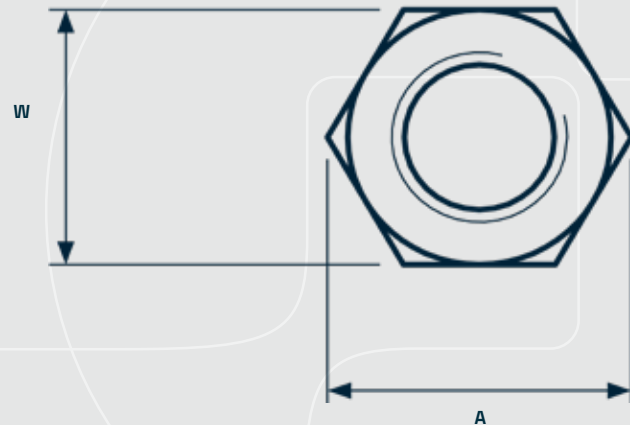

Accessories for levelling feet - dome-headed nuts

DOME-HEADED NUTS DIN 1587 A2



THREAD	DIN NORM	TOTAL HEIGHT B1 [mm]	WRENCH HEIGHT B2 [mm]	W [mm]	OUTER DIAMETER A [mm]	ITEM CODE
M10	DIN 1587 A2	17	8	17	18,90	DIN1587A2M10
M12	DIN 1587 A2	19	10	19	21,10	DIN1587A2M12
M16	DIN 1587 A2	24	13	24	26,75	DIN1587A2M16
M20	DIN 1587 A2	34	16	30	33,53	DIN1587A2M20
M24	DIN 1587 A2	42	19	36	39,98	DIN1587A2M24



Our seismic levelling feet can alternatively be supplied with certified hygienic bolts and nuts. More bolt lengths are available.

Find the relevant assortment of bolts and nuts for seismic levelling feet at our website or in our catalogue.

Accessories - NGI wrenches

XHJSE machine feet need three different wrenches for installation.
NGI wrenches are laser cut and designed to fit NGI machine feet.

Please check the selection guide to see which sizes are needed for your respective model.

- W1: Spindle
- W2: Sleeve
- W3: Counter nut



Accessories - NGI wrenches

NGI WRENCHES



W [mm]	LENGTH L [mm]	THICKNESS C [mm]	HEAD WIDTH B [mm]	ITEM CODE
22	195	10	46	WR22
27	240	10	56	WR27
32	274	10	67	WR32
36	303	10	74	WR36
41	343	10	85	WR41
50	413	10	102	WR50
55	457	10	113	WR55
60	492	10	122	WR60
65	528	10	132	WR65
75	608	10	152	WR75
80	644	10	162	WR80
85	690	10	174	WR85
90	690	10	174	WR90
95	850	10	195	WR95
100	1000	10	195	WR100

SELECTION GUIDE

SPINDLE SIZE	W1 [mm]	W2 [mm]	W3 [mm]
M30	22	36	50
M36	27	41	50
M42	32	50	55
M48	36	55	60
M65S/M56L	41	65	85
M64	50	75	85
M72	55	80	95
M80	65	90	95
M90	75	100	95

UV lighting used to expose bacteria

- THE CERTIFIED HYGIENIC LEVELLING FOOT IS CLEAN
- THE SPINDLE OR THE FULLY-THREADED LEVELLING FOOT IS INFECTED WITH BACTERIA
- FULLY-THREADED VS HYGIENIC - IT TAKES 28% MORE RESSOURCES TO REACH THE SAME LEVEL OF CLEANABILITY ON A FULLY-THREADED FOOT
- RESSOURCES COULD BE TIME, WATER, MONEY, DETERGENTS, ETC.



ESTIMATED SAVINGS
28%



Technical specifications Cleaning Instructions

The resources required to clean NGI's levelling feet depends largely on the design of the levelling foot and the environment in which the levelling foot is used.

It is possible to use all known detergents to clean the levelling feet as long as the instructions provided by the supplier is complied with.

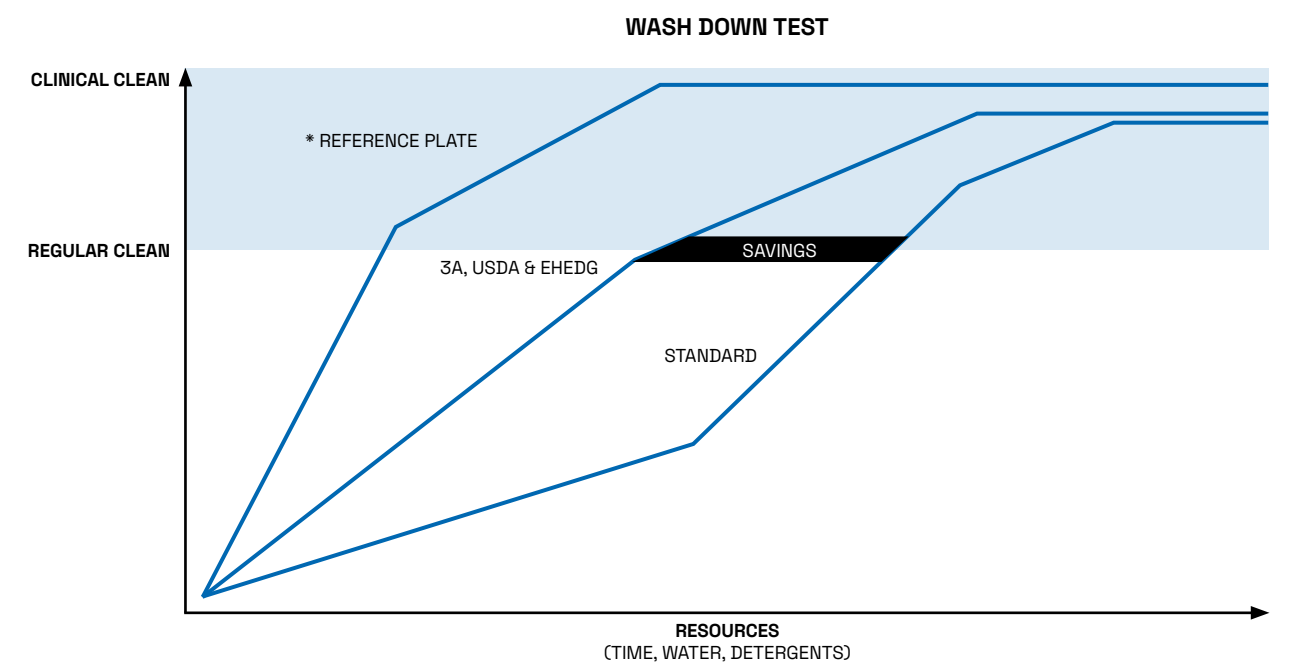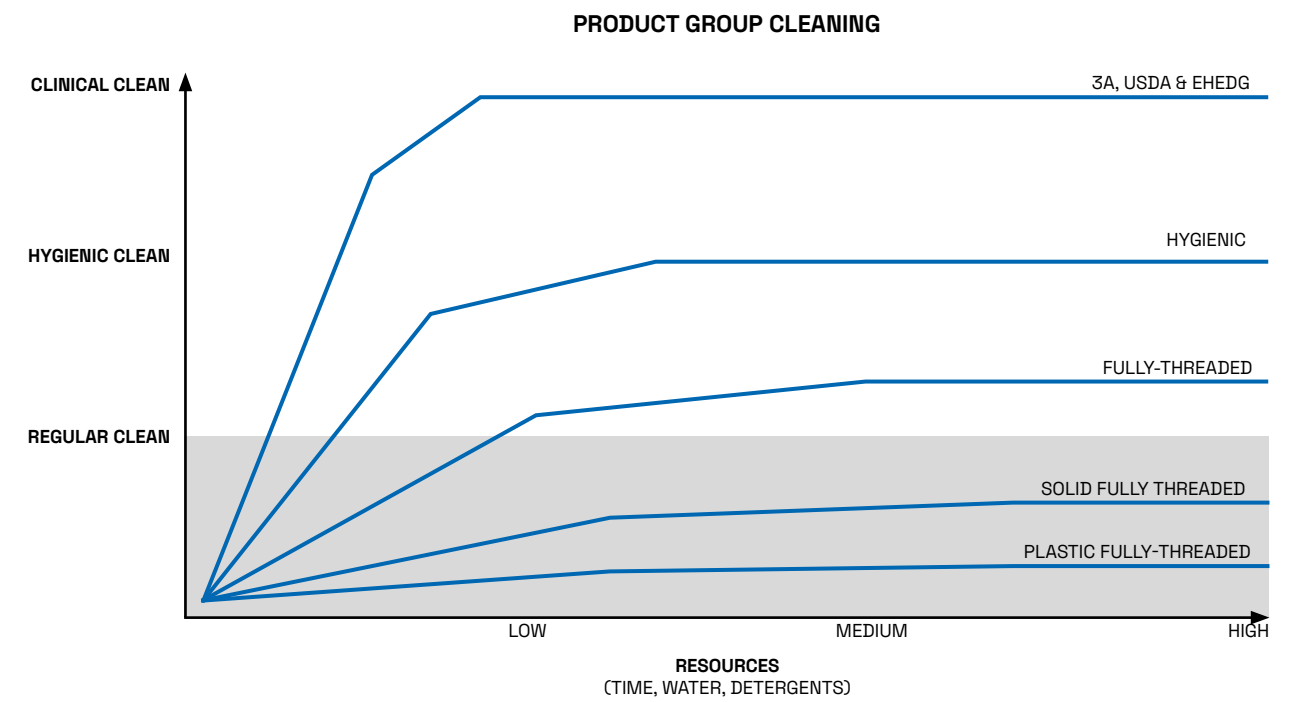


* Reference plate = Stainless steel plate with surface less than Ra 0,8

Product Innovation

Innovating for tomorrow
Investing in research & development

NGI Innovation - the Sustainable Way

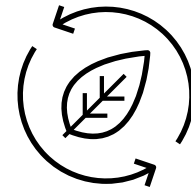


Stainless steel - Recyclable materials

80% of our products can be recycled. We are working on initiatives to make this percentage even higher.




Hygienic seals - Resource saving

Permit easy cleaning and reduce water consumption.

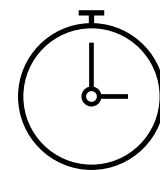

High Quality - Longer lifetime

Our products are very high quality which means they have a longer lifetime than corresponding components.

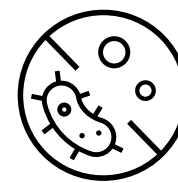

Hygienic design - Protecting consumers

We make sure that the components do not constitute a hygiene risk through innovative and uncompromising design.

Maximum **12-HOURS RESPONSE TIME** to customer enquiries
QUICK ORDER CONFIRMATION (within 24 hours)
 Incoming orders packed and **SHIPPED THE SAME DAY**

World-wide delivery **1-6 DAYS**
 Optional **EXPRESS DELIVERY** (next day)
TRACK & TRACE on all shipments

WHY NGI?

1-4 DAYS
DELIVERY IN
SCANDINAVIA

4-6 DAYS
DELIVERY IN REST
OF WORLD

NO MINIMUM ORDER QUANTITIES
 No levelling **PROJECT IS IMPOSSIBLE** for NGI

NGI offers **ALL TYPES OF HIGH-QUALITY LEVELLING FEET** at competitive prices
 NGI is the **ONLY MANUFACTURER IN THE WORLD** of certified hygienic levelling feet
 Country-specific key account consultants with **LOCAL LANGUAGE SKILLS**

